

Open Source Combustion Instability Low Order Simulator for Longitudinal Modes (OSCILOS_long)

User guide for version 1.5

Developed by Jingxuan Li, Dong Yang, Bertie Boakes, Charles Luzzato
and Aimee S. Morgans*

Published under the BSD Open Source license

Programmed with MATLAB 2019a

First released on July 17, 2019

Website: <http://www.oscilos.com/>

*Contact: a.morgans@imperial.ac.uk

What is OSCILOS?

- The open source combustion instability low-order simulator (OSCILOS) is an open source code for simulating combustion instability. It is written in Matlab®/ Simulink® and is very straightforward to run and edit.
- It can simulate both longitudinal and annular combustor geometries. It represents a combustor as a network of connected modules.
- The acoustic waves are modeled as either 1-D plane waves (longitudinal combustors) or 2-D plane/circumferential waves (annular combustors).
- A variety of inlet and exit acoustic boundary conditions are possible, including open, closed, choked and user defined boundary conditions.
- The response of the flame to acoustic waves is captured via a flame model; flame models ranging from linear n - τ models to non-linear flame describing functions, either defined analytically or loaded from experimental / CFD data, can be prescribed.
- The mean flow is calculated simply by assuming 1-D flow conditions, with changes only across module interfaces or flames.
- This current version is for longitudinal modes. This assumes a longitudinal/cannular/can combustor geometry, or an annular geometry but where only plane acoustic waves are known to be of interest.

Who is developing OSCILOS?

- OSCILOS is being developed by the research group of Professor Aimee Morgans, in the Department of Mechanical Engineering, Imperial College London, UK.
- More details about the development team are available on the website:

<http://www.oscilos.com/>


- The latest version of OSCILOS is available from our Github repository:

<https://github.com/MorgansLab/>

Contributions are welcome and can be submitted with GitHub pull request. These will be reviewed and accepted by the team.

Required Matlab toolboxes

- Control System Toolbox
- Matlab
- Optimization Toolbox
- Robust Control Toolbox
- Simulink
- Symbolic Math Toolbox

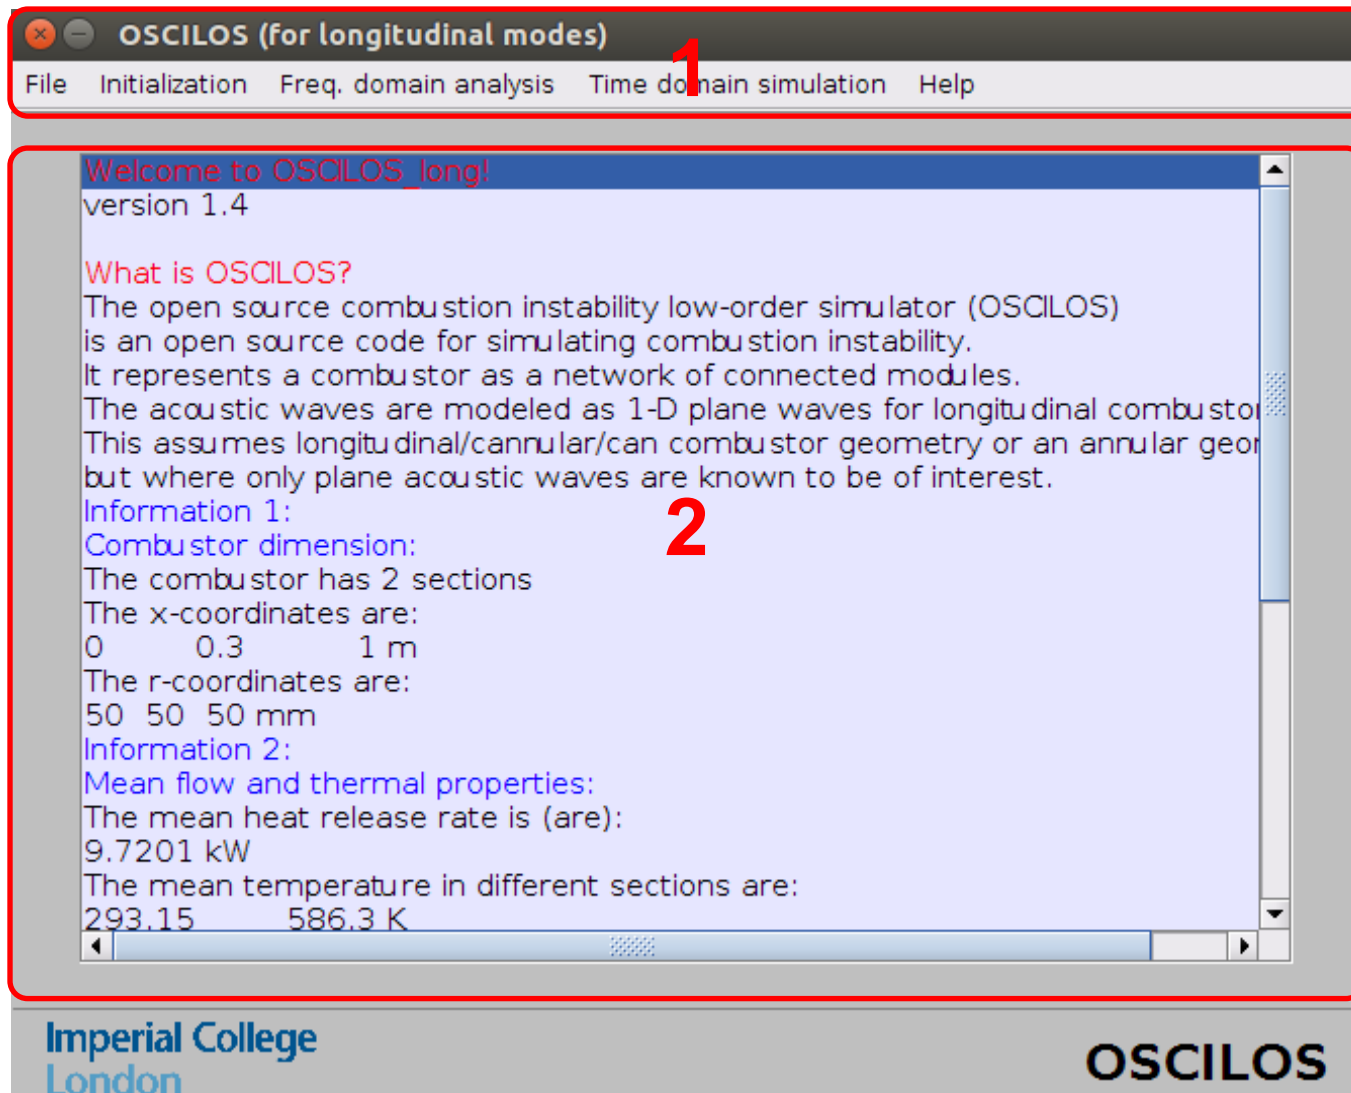

1. Menu Bar

The menu bar organizes the GUI menu hierarchy using a set of pull-down menus.

A pull-down menu contains items that perform executed actions.

2. Information window

Key information from the program run is printed in the information window.

- **File**
 - New case
 - Load...
 - Save...
- **Initialization**
 - Chamber dimensions
 - Thermal properties
 - Flame model
 - Boundary conditions
- **Frequency domain analysis**
 - Eigenmode calculation
- **Time domain simulation**
 - Examination of the Green's function
 - Parameter configuration
 - simulation
 - Results output and plot
- **Help**
 - About
 - User guide


New case: This menu option is used to clear current results and create a new calculation.

Load...: This menu option is used to load data from existing Mat file. The current calculation results will be deleted once the user clicks **Yes**.


Save...: This menu option is used to save the current calculation results as a Mat file.

Initialization / Chamber dimensions

This menu option is used to set the geometric dimensions of the combustor.

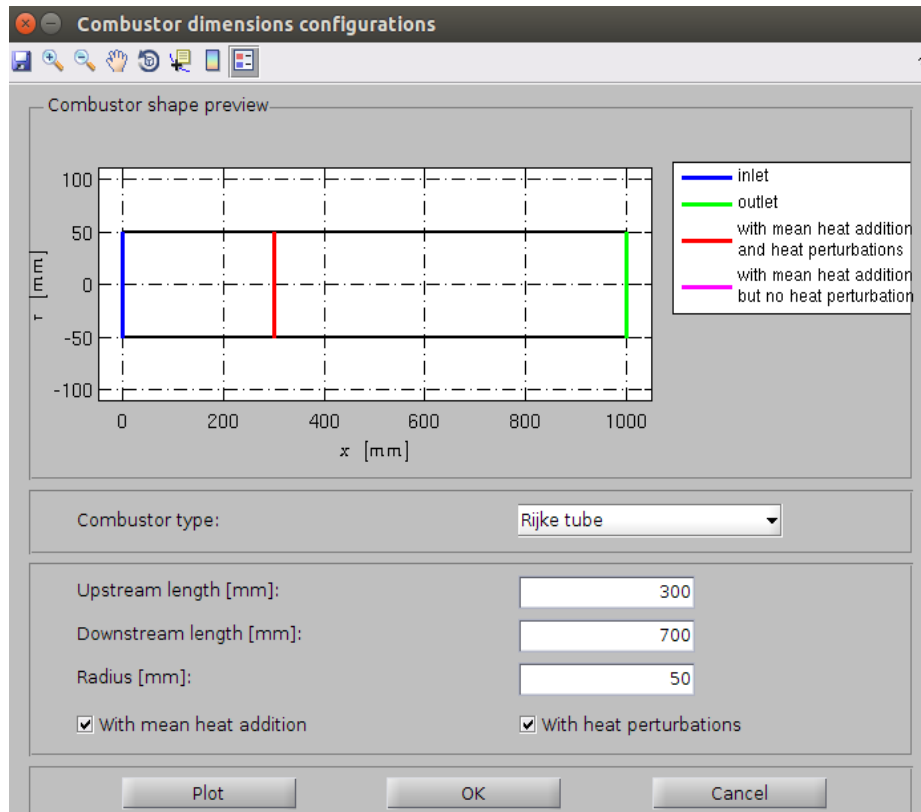

(a) Interface for Rijke tube

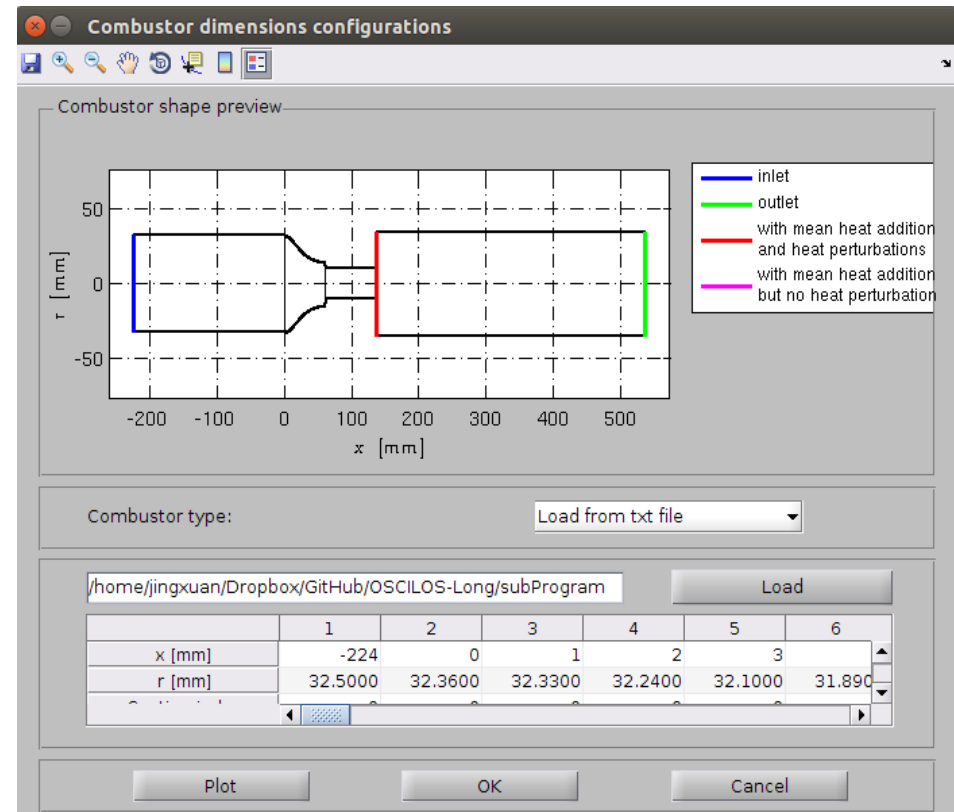

(b) Combustor geometry is loaded from external txt file

- The length and radius of the combustor can be quickly configured for the case of a Rijke tube.
- For complicated combustor geometries, users can load the information from an external txt file by clicking [load](#). It is better to create the txt file as the form of [CD_example.txt](#) in the [subProgram](#) folder. The format of data is shown in the following table:


x [m]	r [m]	Interface index [-]	Module index [-]
-0.830	0.017	0	0
-0.750	0.017	0	1
-0.720	0.050	0	0
-0.520	0.050	0	1
-0.450	0.017	0	0
0	0.035	11	0
0.350	0.035	0	0

where,

- ✓ [x](#) means axial position of each sectional interface;
 - ✓ [r](#) indicates the radius of each section;
 - ✓ [Interface index](#) represents the type of interface between modules: '0': a simple area change; '10': with heat addition and without heat perturbation; '11': with heat perturbations.
 - ✓ [Module index](#) indicates the type of tube between this and the following interface: '0': straight constant area duct; '1': duct with linearly changing radius.
- The schematic of the combustor can be previewed by clicking [Plot](#).
 - The current configuration is saved by clicking [OK](#). The key information will be printed in the information window.

Initialization / Chamber dimensions



OSCILOS can account for cases of multiple heat sources (multi-flames), by setting the section indices to '10' or '11' for the desired interfaces. The following figure shows the schematic view of an example with two flames, in which the red lines are used to represent the unsteady heat sources (flames).

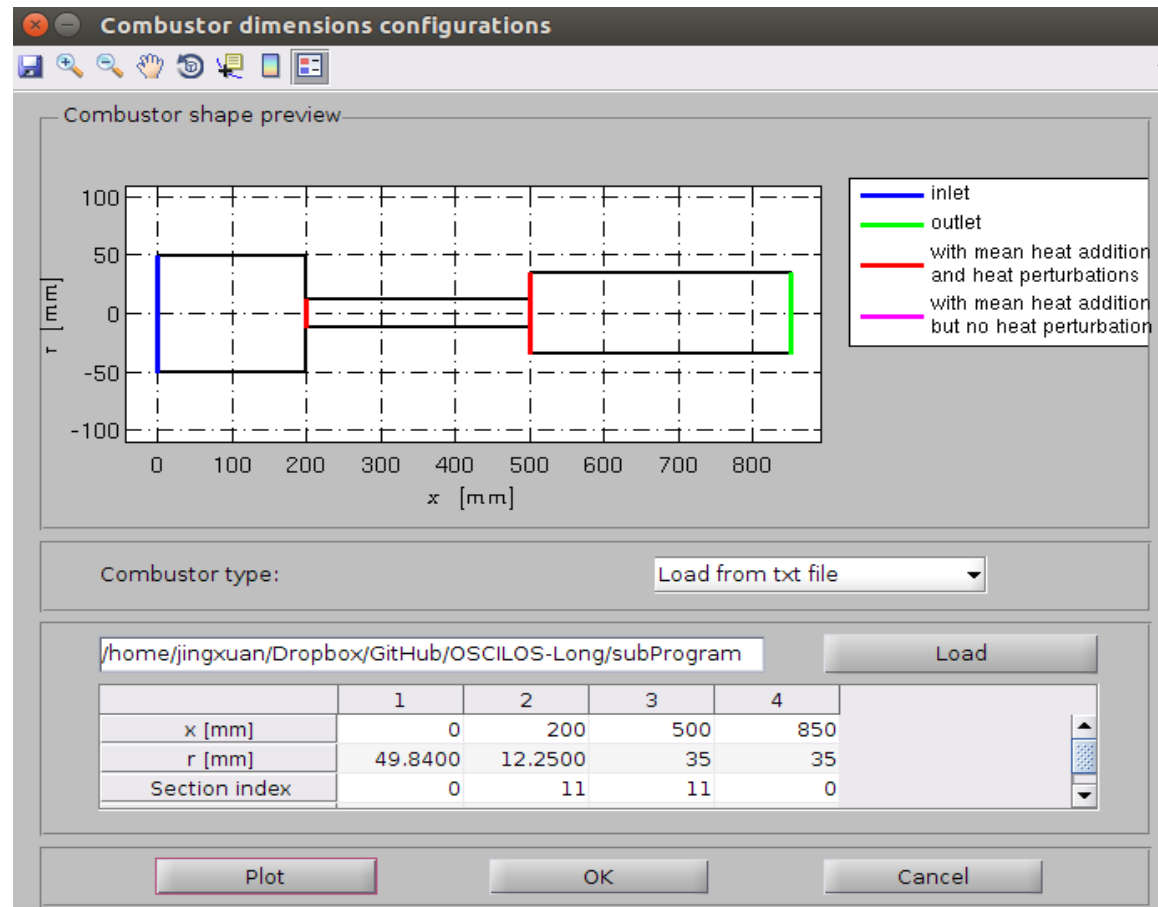

- OSCILOS can account for geometry modules whose sectional radius gradually changes with axial location.
- For example, the following table shows the combustor dimensions of the key interfaces. The module index at interface 2 is “1”, meaning that the radius of the section between interfaces 2 and 3 changes linearly with axial position.


x [m]	r [m]	Interface index [-]	Module index [-]
-0.830	0.017	0	0
-0.750	0.017	0	1
-0.720	0.050	0	0
-0.520	0.050	0	1
-0.450	0.017	0	0
0	0.035	11	0
0.350	0.035	0	0

- This kind of module is split into equally spaced segments for numerical treatment. The number of splits or segments can be set in a jumped window as shown in the top right figure.
- The schematic view of the above combustor is shown in the bottom right figure.

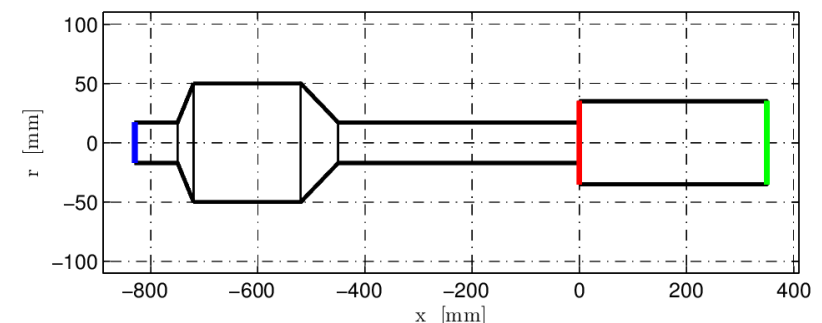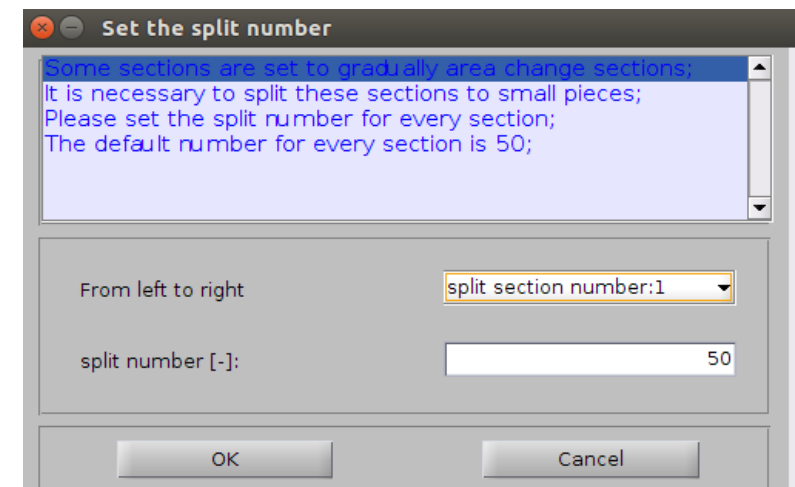

Initialization / Thermal properties

This menu is used to set the inlet mean flow properties and the mean heat addition.

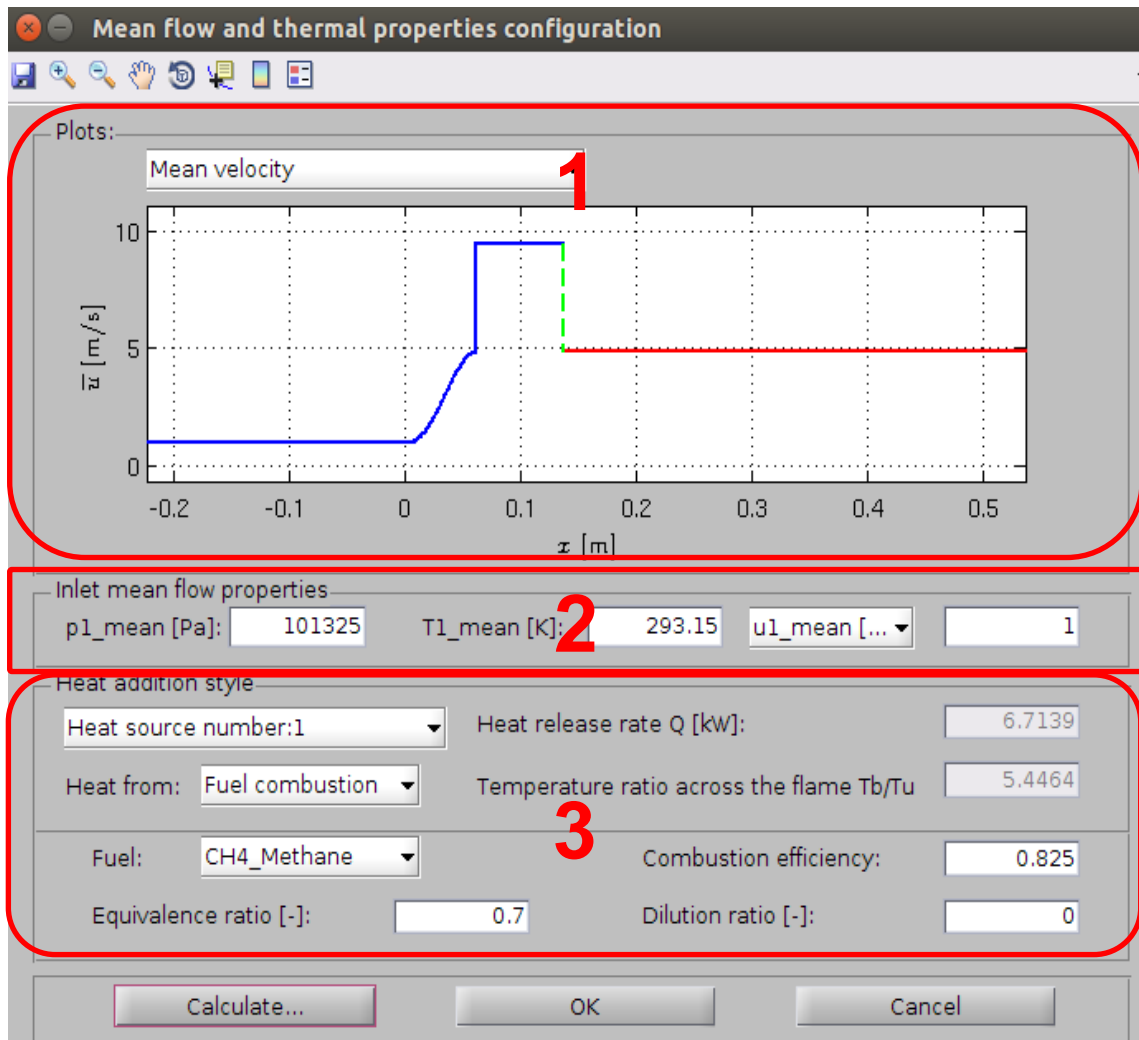

1. Plot panel

This panel is used to plot the distribution of mean velocity and mean temperature with axial position.

2. Mean flow properties panel

The inlet mean pressure, temperature and flow velocity/Mach number are set in this panel.


3. Mean heat addition panel

This panel is used to configure the heat addition, once there is (are) heat source(s) inside the combustor.


- The mean flow and thermal properties within each combustor module are considered uniform for constant sectional area modules.
- Modules with varying sectional radius are split into equally spaced segments for numerical treatment. The mean flow and thermal properties are considered uniform in each segment.
- Users can choose a model for the (mean) heat addition from the drop-down menu.
 - ✓ Heat from a heating grid (T_b/T_u is given), where T_u represents the temperature upstream of the grid, and T_b downstream of the grid. This is often used in the case of a Rijke tube.
 - ✓ Heat from fuel combustion.
 1. Users can choose the fuel from the pop-up menu, including CH_4 , C_2H_4 , C_2H_6 , C_3H_8 , C_4H_8 , C_4H_{10} (n-butane), C_4H_{10} (isobutane) and $\text{C}_{12}\text{H}_{23}$ (Jet-A).
 2. Users can also set:
 - (a) Equivalence ratio
 - (b) Combustion efficiency
 - (c) Dilution ratio, which is used when a bias flow is accounted for.
- The mean properties in different modules can be calculated by clicking "Calculate" once all the inputs have been completed.
- For multiple flames cases, users need to set the parameters for each heat source. The corresponding heat release rate for each heat source is shown in the text box after calculation.
- The distribution of mean temperature and mean flow velocity can be previewed by clicking "Plot figure".
- The current configuration is saved by clicking "OK". The key information will be printed in the information window.

Initialization / Flame model

- This panel is used to choose (flame) model for each unsteady heat source.
- The (flame) model describes how the (normalized) unsteady heat release rate of the unsteady heat source (flame) responds to (normalized) velocity fluctuations.
- Four choices can be prescribed:
 - ✓ A linear (flame) transfer function model;
 - ✓ A simple nonlinear (flame) describing function model, which is assumed can be decoupled as a nonlinear saturation model and a linear (flame) transfer function (FTF) model.
 - ✓ Experimental/CFD (flame) transfer functions (loaded from an external mat file) for different velocity perturbations upstream of the flame. The FTF data are fitted within OSCILOS with state-space models.
 - ✓ The fully non-linear G-Equation model (Williams 1988).
- When users choose a heat source and a (flame) model from the drop pop-up menus and click **Edit**, a corresponding window appears for detailed configuration.
- The button **OK** will be enable once the flame models for all unsteady heat sources have been configured.

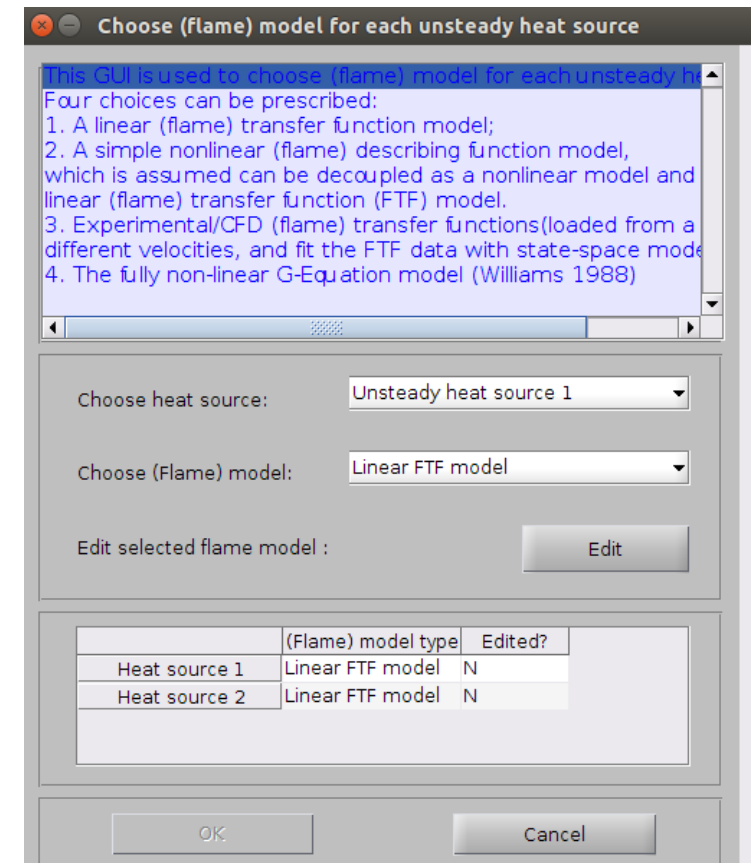

This panel appears once users choose **linear FTF model**.

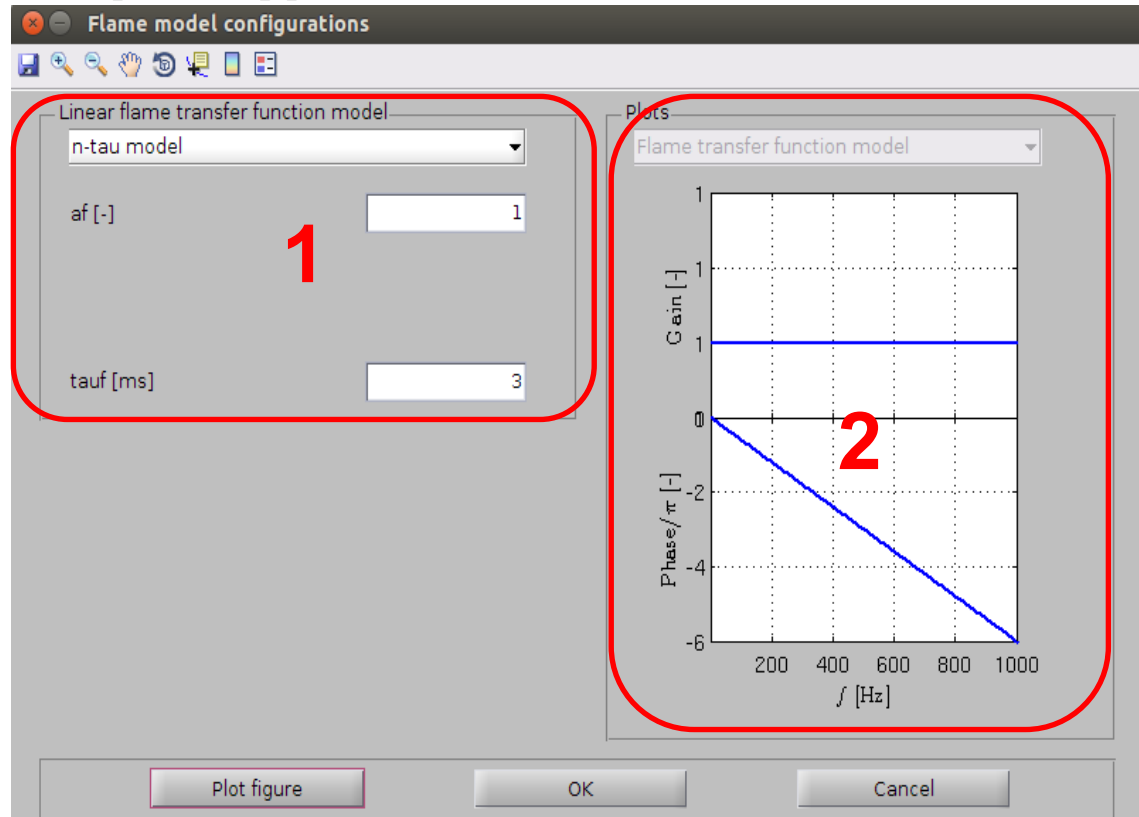


1. Parameters configuration panel


This panel is used to configure the parameters of the flame model. Users can choose the linear FTF from the drop-down menu. The left figure shows the n-tau model configuration panel. Panels corresponding to the other 3 choices are shown in the 3 bottom figures.

2. Plot panel


The evolutions of gain and phase lag of the FTF with frequency are plotted once users click **Plot figure**.

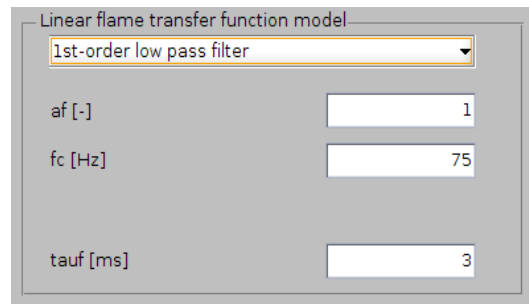

(a) 1st order low pass filter model

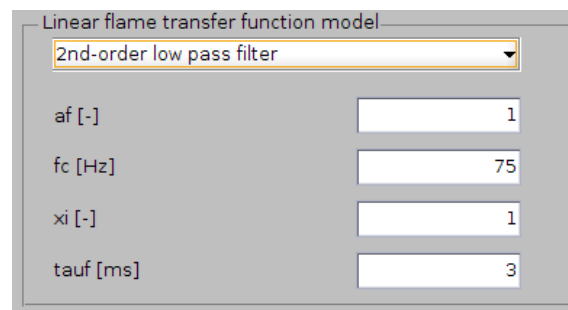

(b) 2nd order low pass filter model

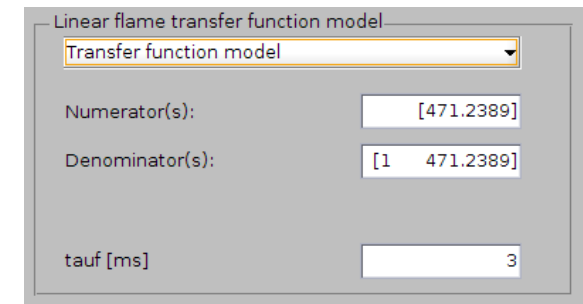

(c) polynomial transfer function

Four kinds of flame transfer function models ($\mathcal{T}_u(s) = \hat{q}(s)/\bar{q} / \hat{u}(s)/\bar{u}$) can be prescribed analytically: the first three involve:

1. Crocco's famous $n - \tau$ model:

$$\mathcal{T}_u(s) = a_f e^{-\tau_f s}$$

2. the $n - \tau$ model filtered by a first order filter:

$$\mathcal{T}_u(s) = \frac{\omega_c}{s + \omega_c} a_f e^{-\tau_f s}$$

3. the $n - \tau$ model filtered by a second order filter:

$$\mathcal{T}_u(s) = \frac{\omega_c^2}{s^2 + 2\xi\omega_c s + \omega_c^2} a_f e^{-\tau_f s}$$

- ▶ s : the Laplace variable
- ▶ a_f : gain
- ▶ τ_f : time delay
- ▶ $f_c = \omega_c/2\pi$: cut-off frequency
- ▶ ξ : damping ratio

The fourth option is a user-defined FTF model using a polynomial transfer function by inputting the numerator coefficients **b** and denominator coefficients **a**. The order of the numerator should not be larger than that of denominator $n \leq m$.

$$\mathcal{T}_u(s) = \frac{b_1 s^{n-1} + b_2 s^{n-2} + \dots + b_{n-1} s + b_n}{a_1 s^{m-1} + a_2 s^{m-2} + \dots + a_{m-1} s + a_m}$$

Two kinds of nonlinear flame describing functions can be prescribed. The first is an abrupt heat release rate ratio saturation model proposed by Dowling (JFM:1997), which can be mathematically expressed as:

$$\frac{\dot{q}'}{\bar{\dot{q}}} = \begin{cases} \left(\frac{\dot{q}'}{\bar{\dot{q}}}\right)_L & \text{for } \left|\frac{\dot{q}'}{\bar{\dot{q}}}\right| \leq \alpha \\ \alpha \operatorname{sgn}\left(\frac{\dot{q}'}{\bar{\dot{q}}}\right) & \text{else} \end{cases}$$

Where α is a constant associated with the saturation ($0 \leq \alpha \leq 1$) and $(\dot{q}'/\bar{\dot{q}})_L$ denotes the heat release rate ratio for weak perturbations, which can be calculated from the linear flame transfer function.

The second nonlinear model was recently proposed by Li and Morgans (JSV:2015). The nonlinear flame describing function depends on s and velocity ratio \hat{u}_1/\bar{u}_1 and it is assumed here can be decoupled as:

$$\tilde{G}(\hat{u}_1/\bar{u}_1, s) = \mathcal{L}(\hat{u}_1/\bar{u}_1) \tilde{T}_u(s)$$

where the superscript $\hat{\cdot}$ indicates the signal amplitude. The nonlinear function $\mathcal{L}(\hat{u}_1/\bar{u}_1)$ describes the saturation of heat release rate with velocity perturbations \hat{u}_1/\bar{u}_1 , and $\mathcal{L}(\hat{u}_1/\bar{u}_1) = \tilde{G}(\hat{u}_1/\bar{u}_1, 0)$. The mathematical link is:


$$\frac{\hat{q}(\hat{u}_1/\bar{u}_1, 0)}{\bar{q}} = \mathcal{L}(\hat{u}_1/\bar{u}_1) \frac{\hat{u}_1}{\bar{u}_1} = \int_0^{\hat{u}_1/\bar{u}_1} \frac{1}{1 + (\xi + \alpha)^\beta} d\xi$$

where α and β are two coefficients which determine the shape of the nonlinear model. One may also introduce a simple nonlinear model of the time delay, using the mathematical description:

$$\tau_f = \tau_f^0 + \tau_f^N (1 - \mathcal{L}(\hat{u}_1/\bar{u}_1))$$

where τ_f^0 means the time delay when $\hat{u}_1/\bar{u}_1 = 0$ and τ_f^N is a time delay to describe the change of τ_f as \mathcal{L} changes.

This panel appears once users choose nonlinear FDF model.

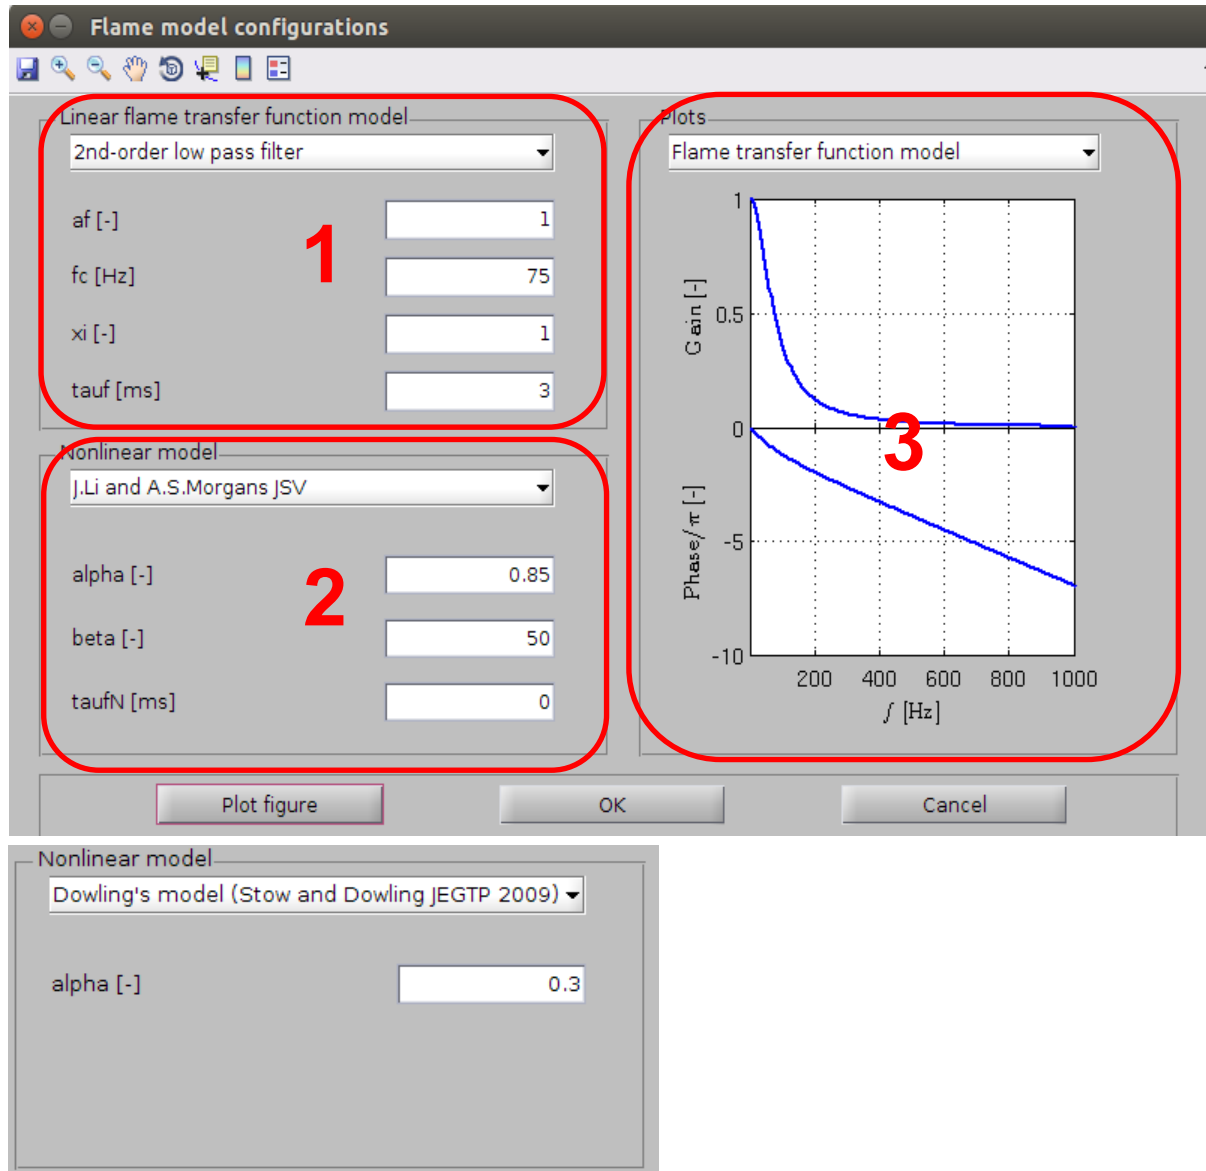

1. FTF parameters configuration panel

This panel is used to configure the parameters of the linear flame transfer function. Users can choose a linear FTF from the drop-down menu (see slide 15).


2. Nonlinear model parameters configuration panel

This panel is used to configure the saturation limit value (α) for Dowling's model (as shown in the bottom figure) or parameters for the second nonlinear saturation model.


3. Plot panel

Three kinds of plots can be prescribed:


- (1) Flame transfer function
- (2) Nonlinear saturation model
- (3) Flame describing function

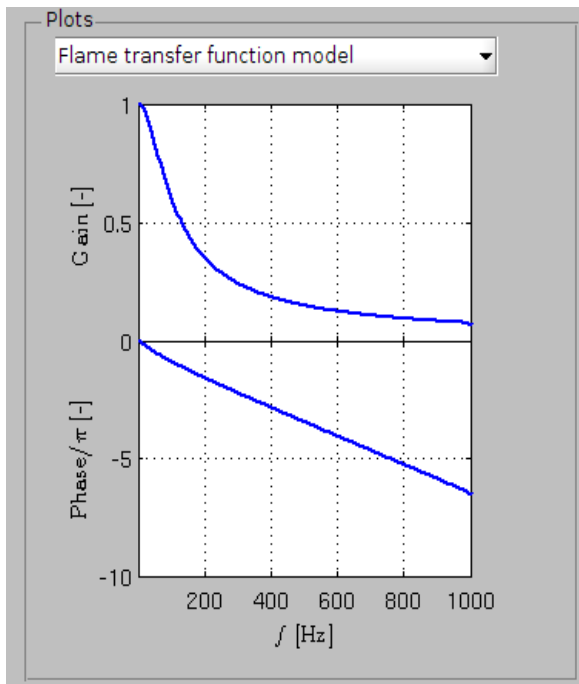

(a) Flame transfer function

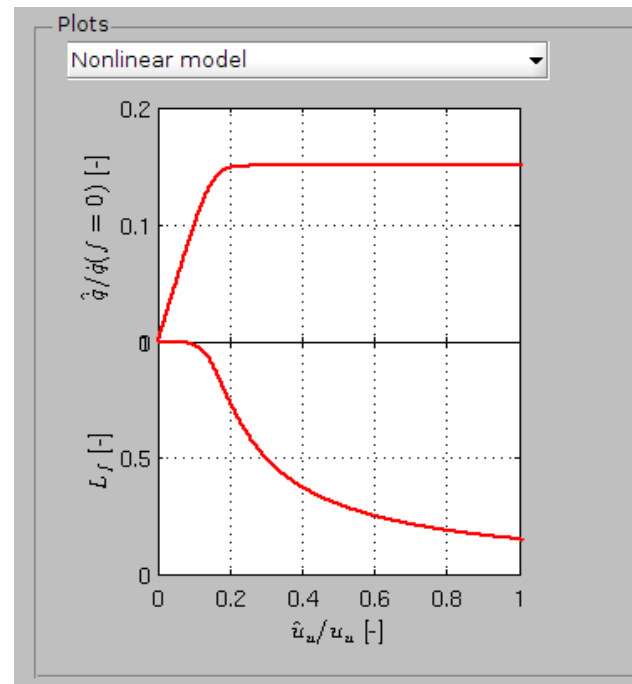


(b) Nonlinear saturation model

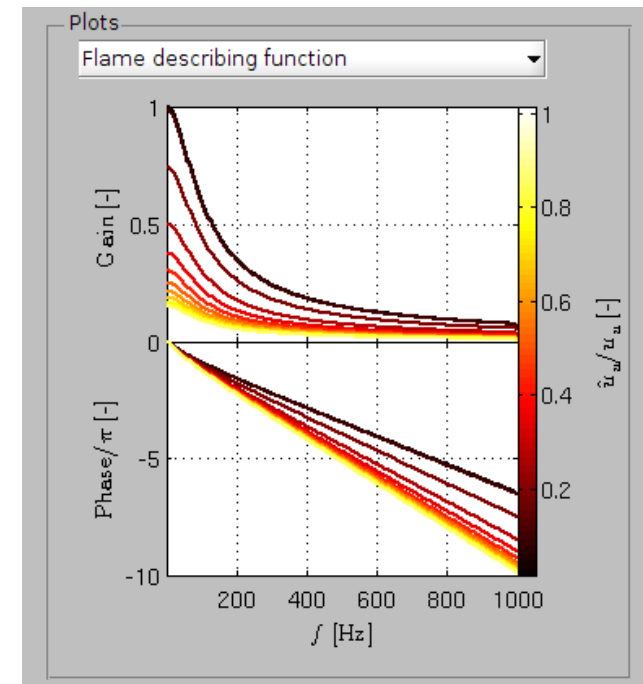

(c) Flame describing function

Initialization /Flame model /Loaded and fitted FDF from experiment or CFD data

This panel appears once users choose [Experimental/CFD fitted FDF](#).

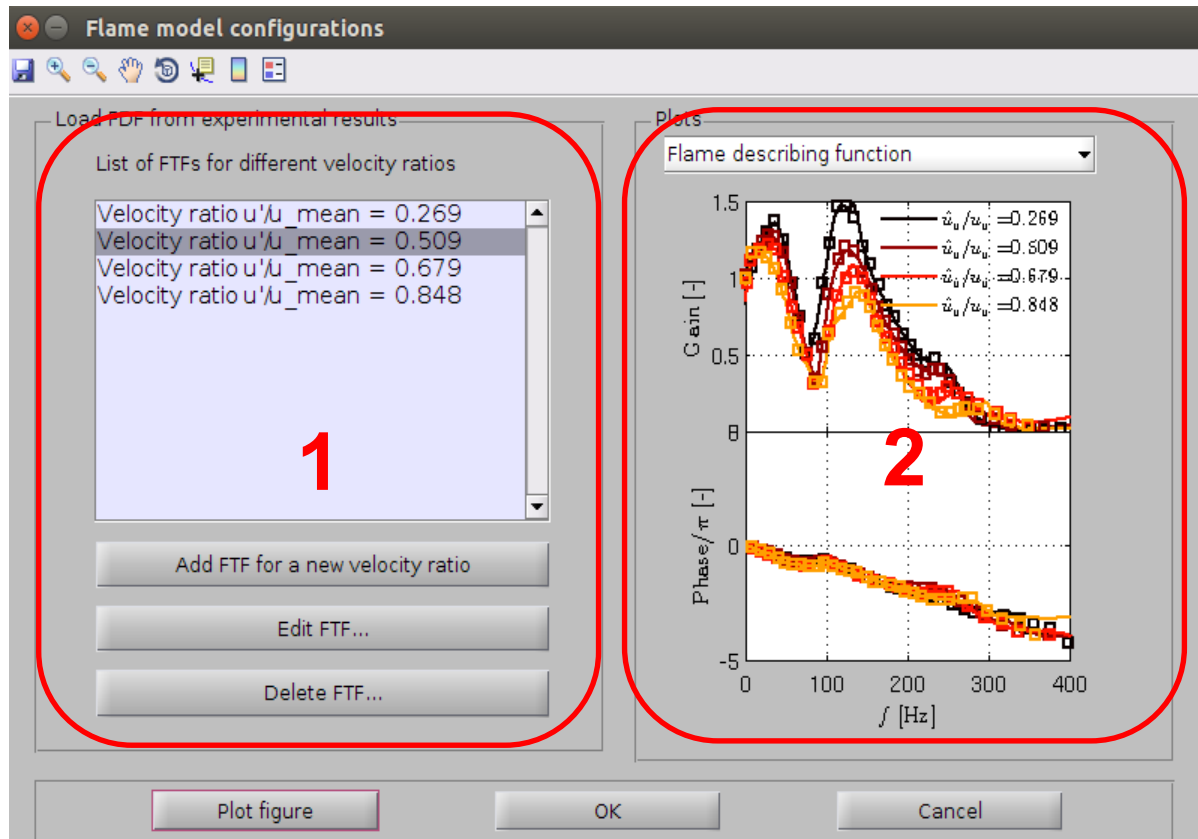

1. FDF editing panel

Users can add, edit or remove the flame transfer functions for different flame velocity perturbation levels obtained from experiment or CFD simulation.

2. Plot panel

The original data and fitted FDF can be viewed from this plot.

Initialization /Flame model /Loaded and fitted FDF from experiment or CFD data

- Once the button **Add FTF for a new velocity ratio** is clicked, a window for displaying the experimental/CFD FTF and fitting will appear.

1. Data import panel

Users can set the velocity ratio and then import experimental/CFD FTF from an external Mat file. (It is better to save the data in a Mat file prior to running OSCILLOS. The data format is for example shown in the right bottom figure).


2. Fitting parameters configuration panel

Users need to set the fitting frequency range, time delay correction, fitting order and relative degree of denominator compared to numerator, which are used for fitting, via the Matlab command “fitfrd”.

3. Plot panel

The original data (markers) and fitted FTF (solid line) can be viewed from this plot.

- The fitting process is operated upon clicking **Fit and plot**.
- The original FTF data and fitting parameters are saved by clicking **save fitting**.

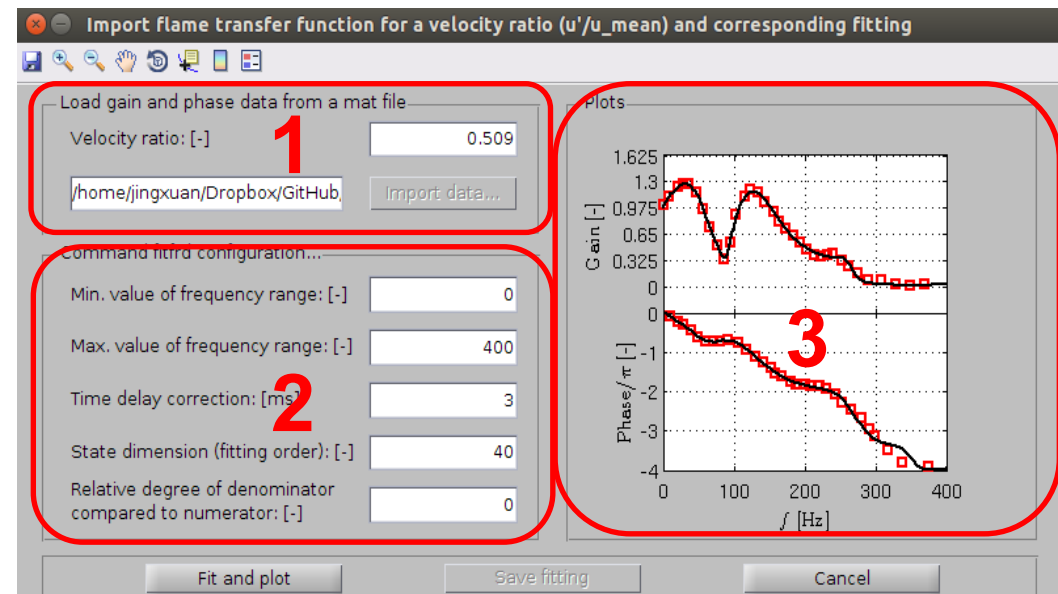

Gain		Name	Value	Min	Max
35x2 double		Gain	35x2 double	2....	39...
		Phase	32x2 double	-1...	39...
1	3.0960 0.9962				
2	7.4303 1.0642				
3	14.86... 1.1830				
4	26.00... 1.3019				
5	36.53... 1.3698				

The first column is the frequency and the second one is the corresponding gain or phase lag (in rad).

Initialization/Boundary conditions

This menu is used to set the inlet and outlet boundary conditions.


Six kinds of boundary conditions are provided:

- ✓ Open end ($R = -1$).
- ✓ Closed end ($R = 1$).
- ✓ Choked end.
- ✓ User defined (Amplitude and time delay)...
- ✓ User defined (Amplitude and phase)...
- ✓ User-defined model using a polynomial transfer function by inputting the numerator coefficients b and denominator coefficients a . The order of the numerator

$$R(s) = \frac{b_1 s^{n-1} + b_2 s^{n-2} + \dots + b_{n-1} s + b_n}{a_1 s^{m-1} + a_2 s^{m-2} + \dots + a_{m-1} s + a_m}$$

In addition, for the downstream end only it is possible to choose:

- ✓ Heat exchanger + downstream section

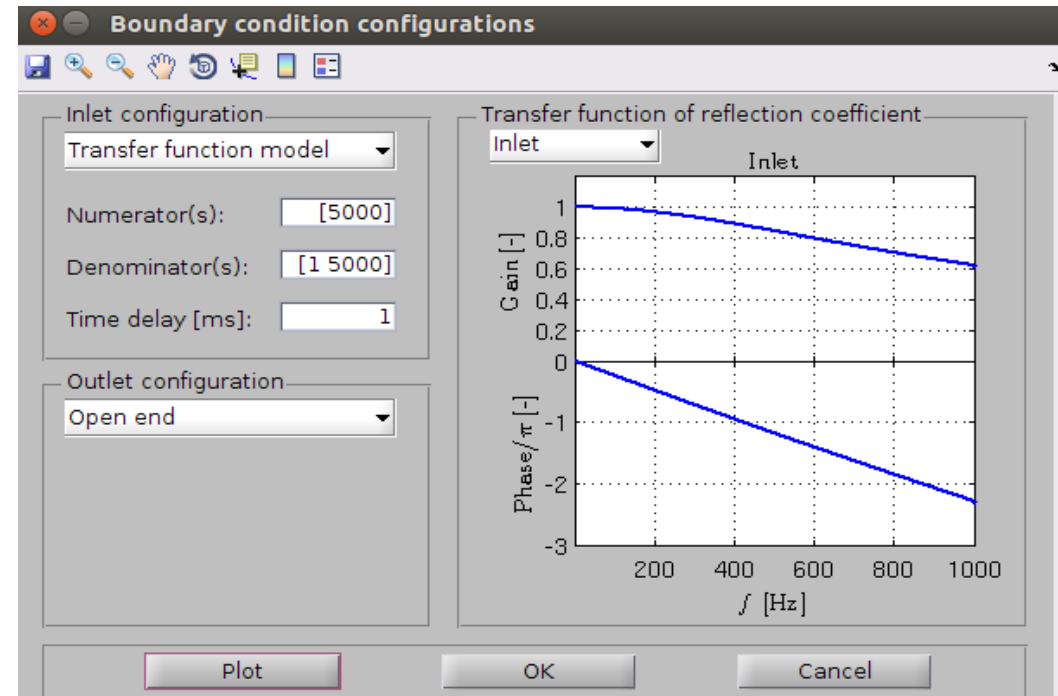

Boundary conditions / Include indirect noise from entropy waves - 1

When the user chooses a choked outlet boundary, there is the option on whether or not to include indirect noise from the entropy wave acceleration. Two models to account for advection of entropy waves can be chosen:

- ▶ A “Rectangular” model (proposed by Sattelmayer (2003)): The p.d.f. or impulse response is modelled as a rectangular pulse of length $2\Delta\tau_C^s$ and height $1/2\Delta\tau_C^s$ centred about the mean residence time τ_C^s :

$$E_C^{\text{inlet}}(t) = \delta(t)$$

$$E_C^{\text{outlet}}(t) = \begin{cases} \frac{1}{2\Delta\tau_C^s} & \text{for } \tau_C^s - \Delta\tau_C^s \leq t \leq \tau_C^s + \Delta\tau_C^s \\ 0 & \text{else} \end{cases}$$

The corresponding Laplace transform of the transfer function between the entropy waves at the outlet and inlet can be expressed as:

$$\frac{\tilde{E}_C^{\text{outlet}}(s)}{\tilde{E}_C^{\text{inlet}}(s)} = \tilde{\mathcal{E}}(s) \exp(-\tau_C^s s) = \frac{\exp(\Delta\tau_C^s s) - \exp(-\Delta\tau_C^s s)}{2\Delta\tau_C^s s} \exp(-\tau_C^s s)$$

Boundary conditions / Include indirect noise from entropy waves - 2

- ▶ A “Gaussian” model (proposed by Morgans et al.(2013)): Shear dispersion is assumed to be predominantly caused by spatial variations in the time-mean velocity profile, rather than by turbulent eddies. The impulse response is modelled as a Gaussian distribution:

$$E_C^{\text{inlet}}(t) = \delta(t)$$
$$E_C^{\text{outlet}}(t) = \frac{1}{\sqrt{\pi}\Delta\tau_C^s} \exp\left(-\left(\frac{t - \tau_C^s}{\Delta\tau_C^s}\right)^2\right)$$

with the Laplace transforms of the transfer function:

$$\tilde{\mathcal{E}}(s) = \exp\left(\frac{(\Delta\tau_C^s s)^2}{4}\right)$$

where time delay $\Delta\tau_C^s$ is proposed to describe the dispersion of residence time.


Boundary conditions – including a heat exchanger

- OSCILOS_long can incorporate tubular crossflow heat exchangers as part of a downstream boundary condition. The necessary theoretical developments are described in [1]; this user guide concerns use of OSCILOS only.

[1] B. Boakes, “Predicting Instabilities in a Rocket Engine Preburner – Final Report,” Final year project report, Imperial College London, 2019.

Boundary conditions/ heat exchanger setup


- OSCILOS_long allows combustors to be terminated by tubular crossflow heat exchangers with a subsequent length of uniform duct between the heat exchanger and system outlet. This is illustrated as:

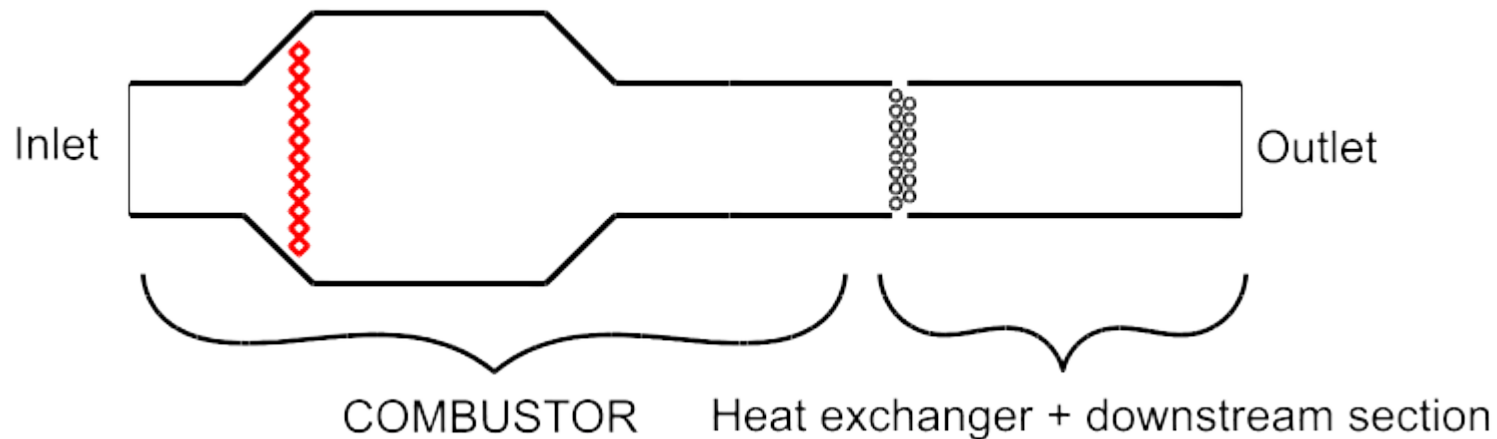

- Note that, in the current implementation,
 - as far as setup is concerned, the inlet to the heat exchanger is the outlet of the combustor, and thus the heat exchanger must be the last non-duct component of the system
 - only a straight section of duct can lie between the heat exchanger and system outlet

Boundary conditions/ heat exchanger modelling

- The acoustic response of the heat exchanger is determined using a simplified model; each tube row is approximated as a series of heat source, isentropic constriction, propagation and irreversible expansion, as illustrated below.

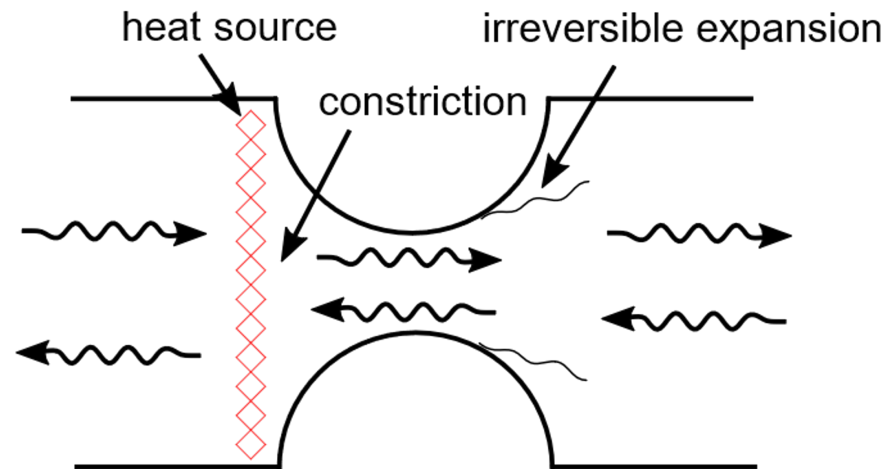


- For the heat source, constriction and irreversible expansion, appropriate conservation equations (mass, energy, momentum) are solved for the mean flow properties. These equations are linearised for small acoustic perturbations of the velocity, density and pressure to determine the acoustic response.

Boundary conditions/ heat exchanger setup

1. Heat Exchanger Boundary Condition Dropdown


The heat exchanger outlet condition can be selected from the outlet configuration dropdown in the boundary conditions window.

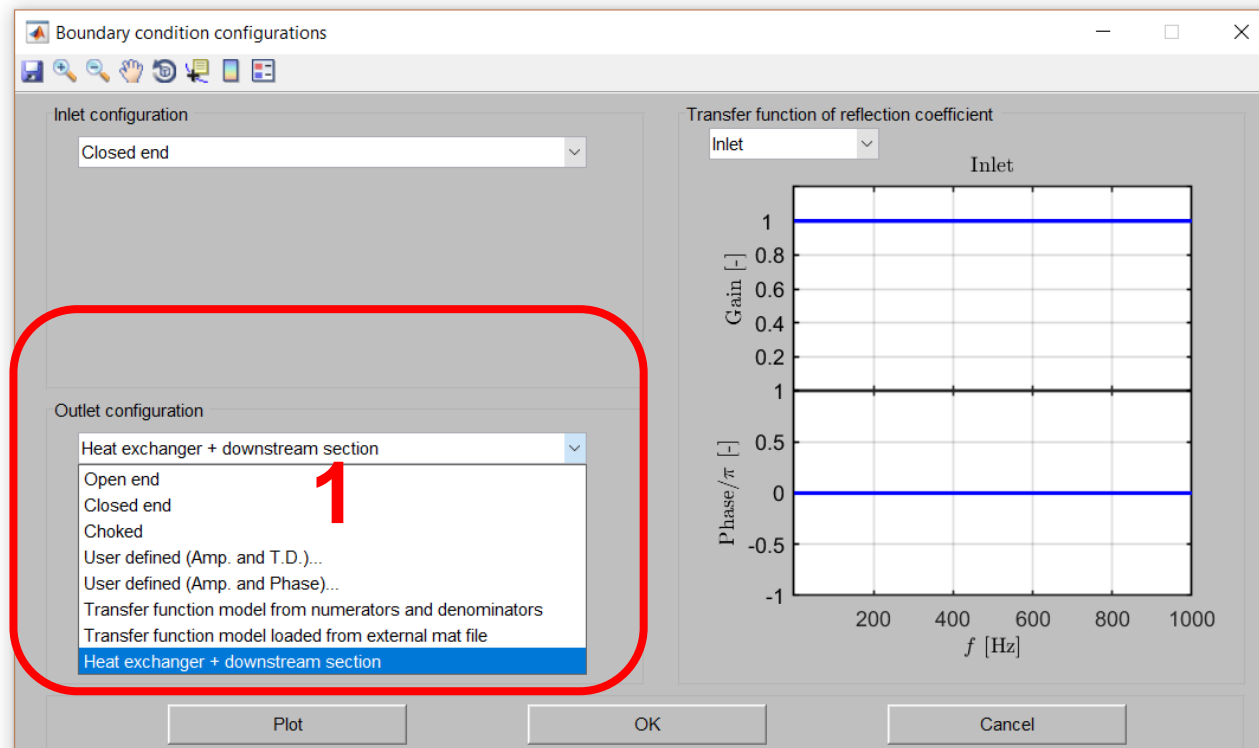


Boundary conditions/ heat exchanger setup

1. Heat Exchanger Boundary Entropy Noise Options

Selecting the heat exchanger boundary condition dropdown prompts the user to specify whether entropy waves should propagate to the heat exchanger inlet and, if so, how they are dispersed/dissipated whilst travelling through the combustor. These behaviors are configured in the window 2, which is identical to that for a choked outlet as described previously.

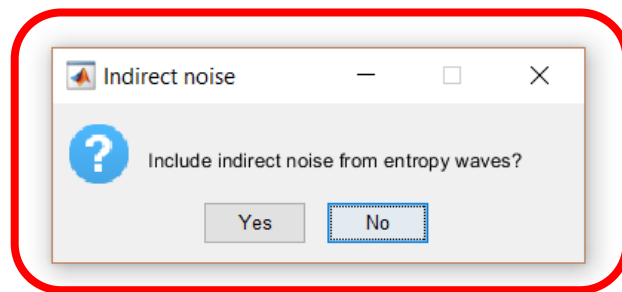

1

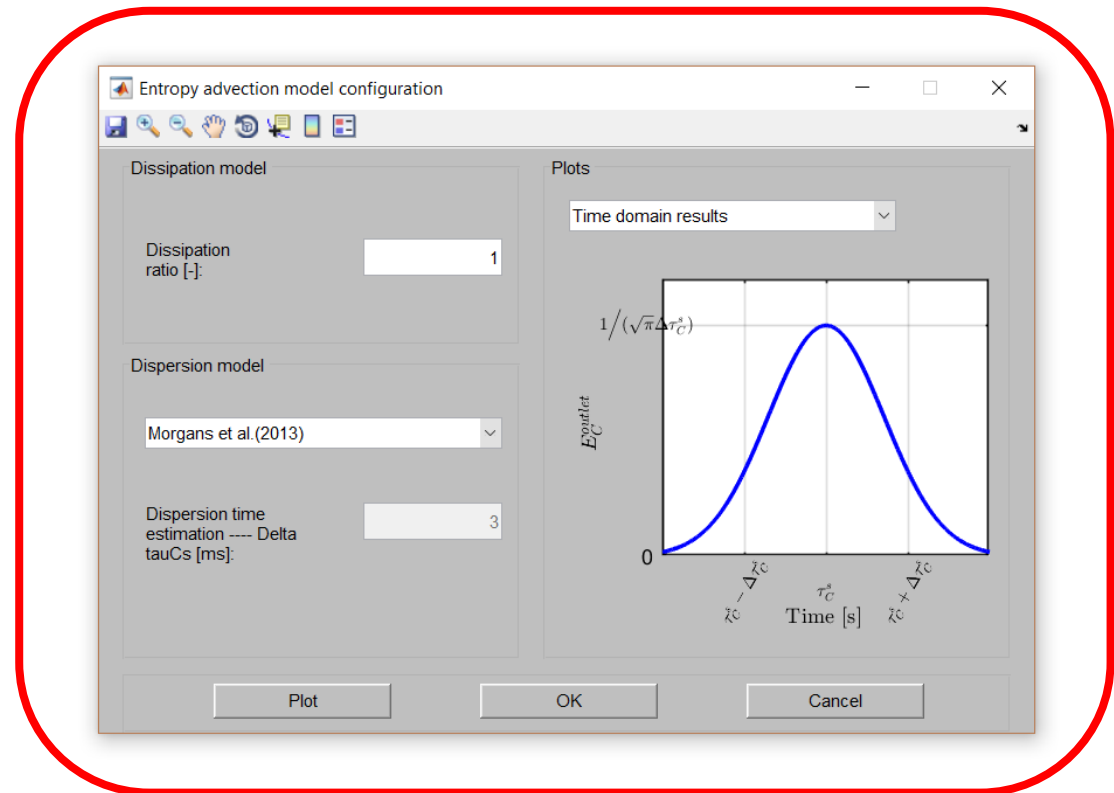

2

Boundary conditions/ heat exchanger setup


1. Heat Exchanger Setup button

Pressing the heat exchanger setup button opens 2


2. Heat exchanger setup window

This window permits entry of the properties of the heat exchanger and downstream section. These are described overleaf.

1

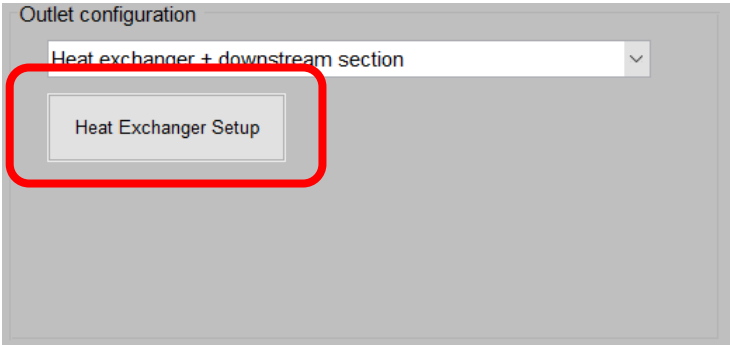

2

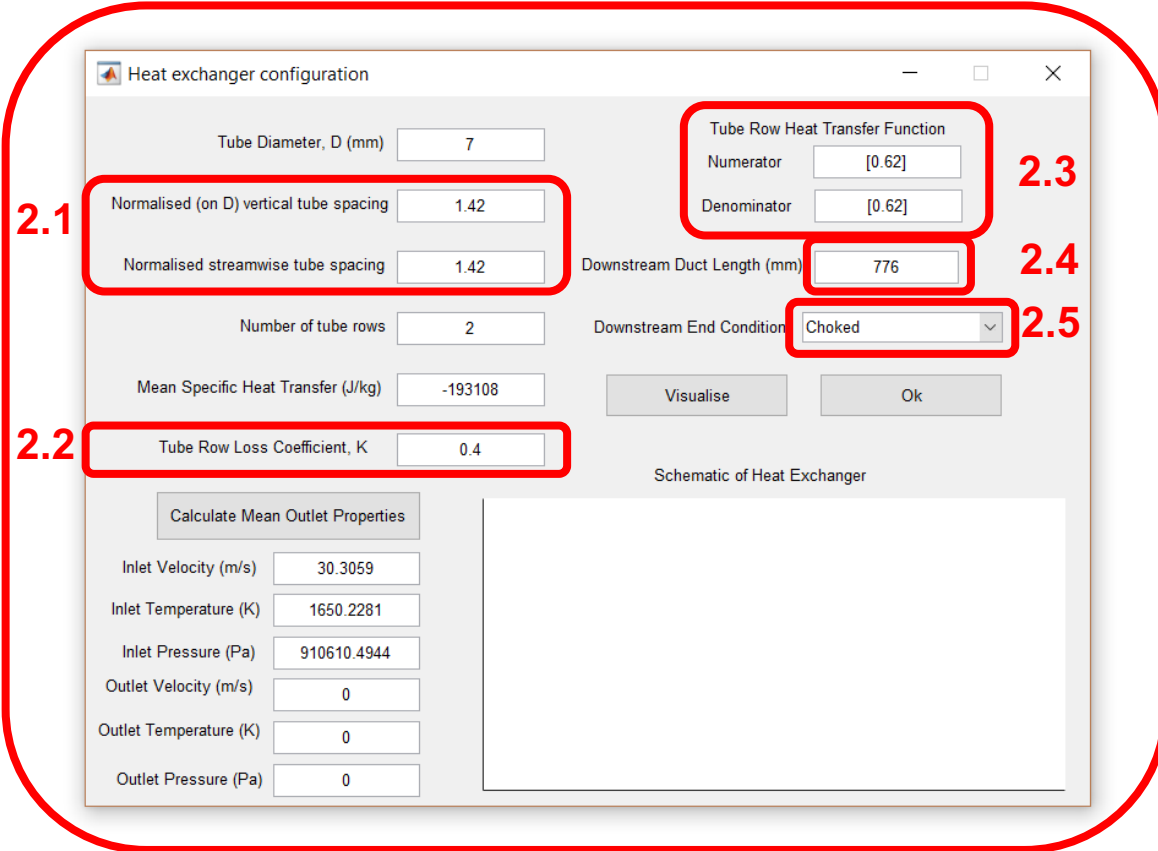

2.1

2.2

2.3

2.4

2.5

Heat exchanger configuration

Tube Diameter, D (mm) 7

Normalised (on D) vertical tube spacing 1.42

Normalised streamwise tube spacing 1.42

Number of tube rows 2

Mean Specific Heat Transfer (J/kg) -193108

Tube Row Loss Coefficient, K 0.4

Calculate Mean Outlet Properties

Inlet Velocity (m/s) 30.3059

Inlet Temperature (K) 1650.2281

Inlet Pressure (Pa) 910610.4944

Outlet Velocity (m/s) 0

Outlet Temperature (K) 0

Outlet Pressure (Pa) 0

Tube Row Heat Transfer Function

Numerator [0.62]

Denominator [0.62]

Downstream Duct Length (mm) 776

Downstream End Condition Choked

Visualise


Ok

Schematic of Heat Exchanger

Boundary conditions/ heat exchanger setup

2.1. Vertical and streamwise tube spacing

The normalized vertical and streamwise tube spacing are defined as S_1/D and S_2/D .

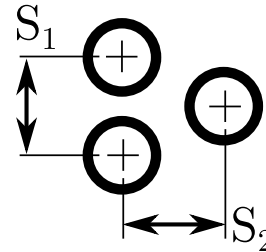

2.2. Tube row loss coefficient

This is the stagnation pressure loss coefficient for a single tube row. It influences the mean flow pressure loss, but since the aeroacoustic interaction of the tube row is treated quasi-steadily, it also implies the strength of acoustic dissipation. Each row has the same loss coefficient, by assumption.

2.3. Tube row heat transfer function coefficients

The heat exchanger heat transfer function ($T_u = \frac{\hat{q}/\bar{q}}{\hat{u}/\bar{u}}$) is specified by a quotient of two polynomials of arbitrary degree, as shown below.

$$T_u = \frac{b_1 s^{n-1} + b_2 s^{n-2} + \dots + b_{n-1} s + b_n}{a_1 s^{m-1} + a_2 s^{m-2} + \dots + a_{m-1} s + a_m}$$

The b_i and a_i are the elements of the matrices entered in the numerator and denominator textboxes.

2.4. Downstream duct length

This is the length of duct between the heat exchanger and the downstream outlet.


2.5. Downstream end condition

This dropdown selects the end condition downstream of the heat exchanger. If the user selects choked, the GUI asks if/how entropy waves are advected from the heat exchanger to the outlet.

Boundary conditions/ heat exchanger boundary condition plots

1. Heat exchanger boundary condition plot

With the heat exchanger boundary selected, the plot button plots the acoustic reflection coefficient measurable at the upstream face of the heat exchanger. This is a function of the heat exchanger properties, the length of duct downstream of the heat exchanger and the outlet downstream of that.

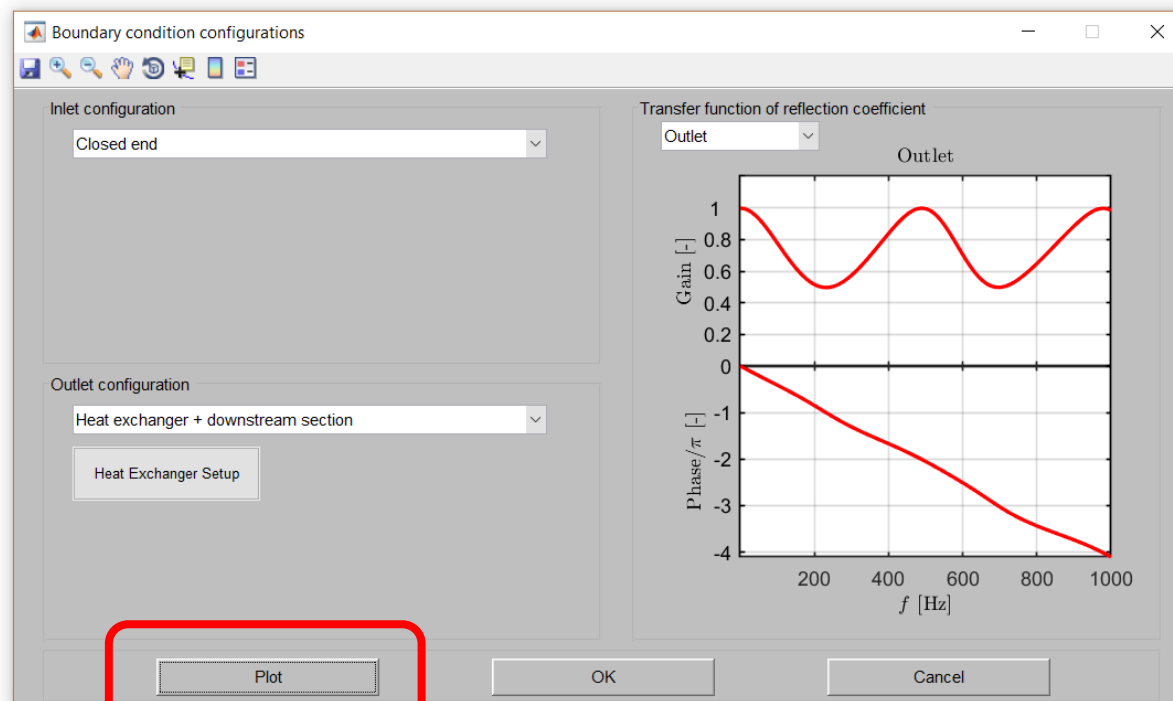


1

Eigenmode plots with heat exchangers


1. Heat exchanger eigenmode plots

With the heat exchanger boundary selected, the eigenmode plots show the streamwise extent of the heat exchanger using dashed lines.

1

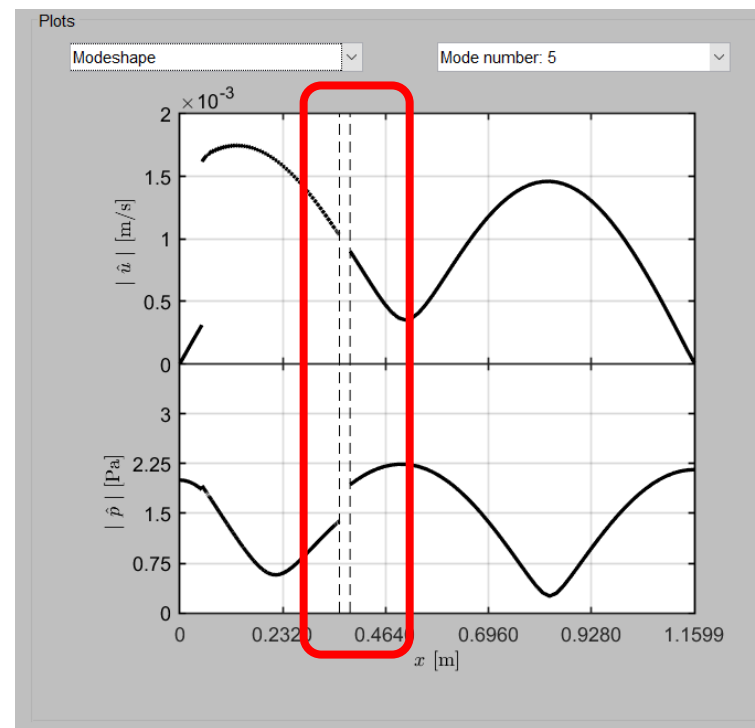

Once all initializations are complete, the user can then progress to the “Eigenmode calculation” panel.

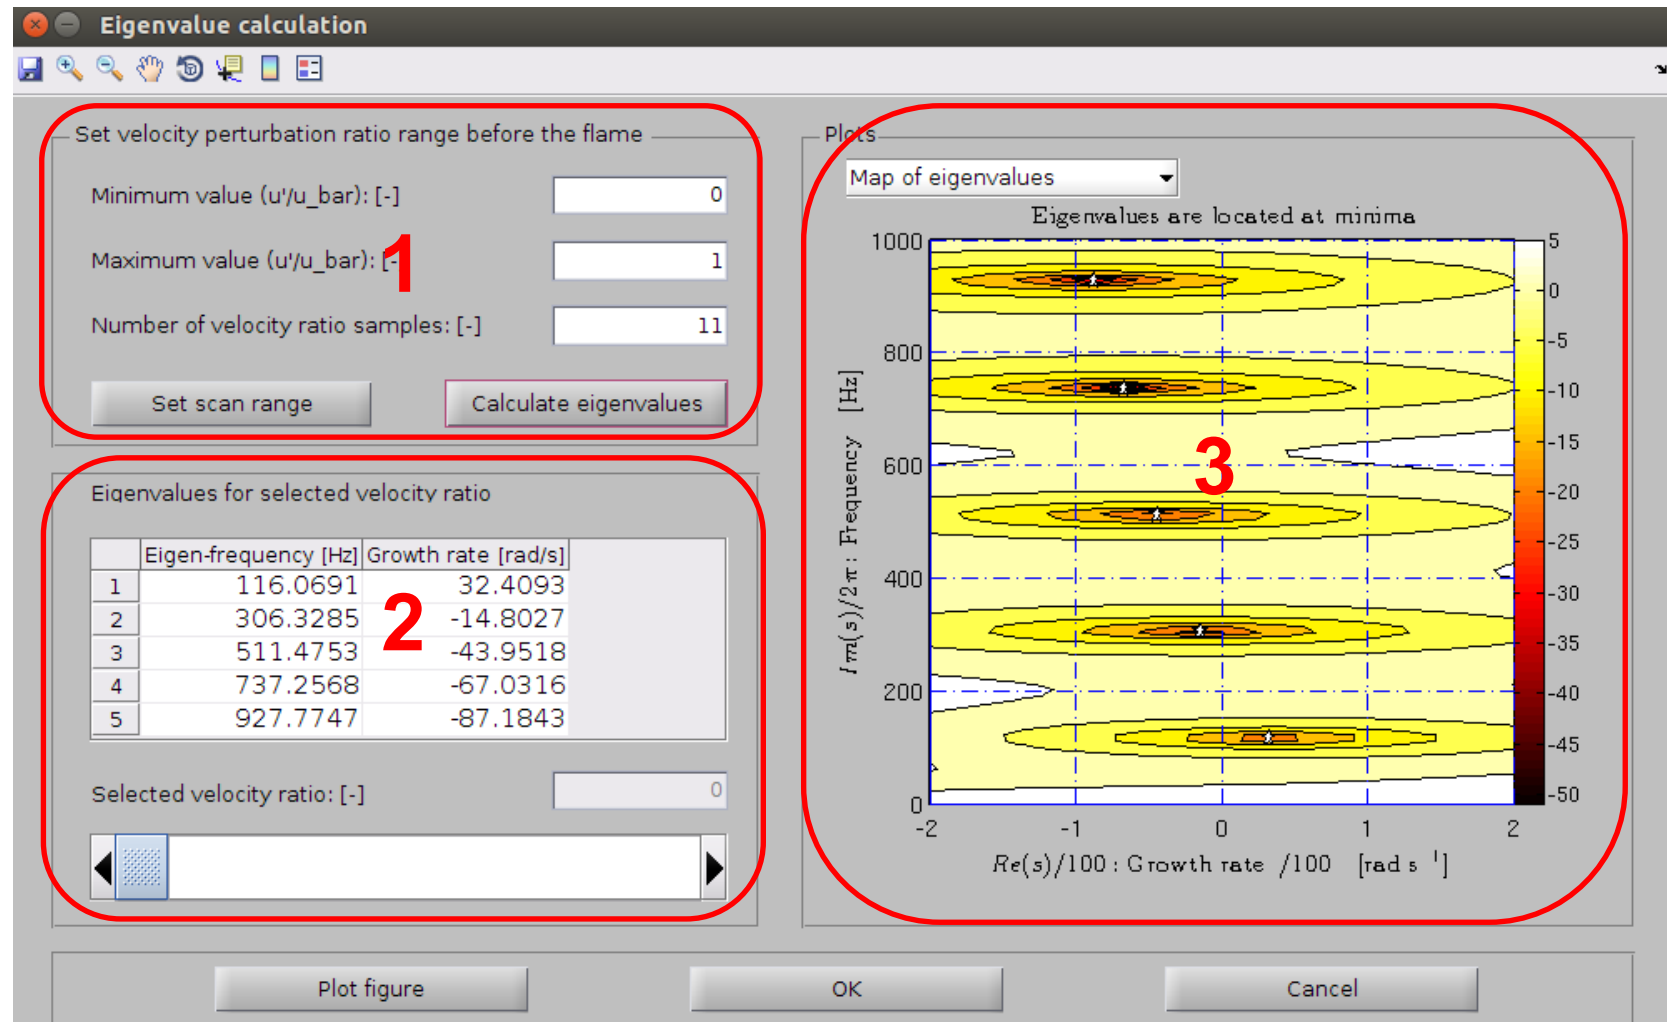

- **1. Velocity ratios and eigenmode scan domain configuration panel**
- Users need to set the minimum and maximum velocity ratios before the flame if the **nonlinear flame describing function model** has been chosen (as shown in first figure). The number of velocity ratio samples is also needed to equally space the velocity ratio range.
- In the case that the flame describing function was provided by experimental or CFD data, these “edit” boxes are not enabled -- their values are automatically assigned (as shown in second figure).
- In the case that **linear flame transfer function model** was chosen or there is no flame or unsteady heat source inside the combustor, the “edit” boxes are not visible (as shown in the third figure).
- Users need to define a scan range (including frequency and growth rate) to search for eigenvalues within this range, as shown in the right bottom figure. This can be done by clicking “**Set scan range**”.
- When all the setting has been completed, users can calculate the eigenvalues for a set of velocity ratios (or an arbitrary velocity ratio for linear FTF or no flame case).

Set velocity perturbation ratio range before the flame

Minimum value (u'/\bar{u}): [-]

Maximum value (u'/\bar{u}): [-]

Number of velocity ratio samples: [-]

Set velocity perturbation ratio range before the flame

Minimum value (u'/\bar{u}): [-]

Maximum value (u'/\bar{u}): [-]

Number of velocity ratio samples: [-]

Set velocity perturbation ratio range before the flame

Scan range configuration

Frequency scan domain setting

Frequency min. value [Hz]:

Frequency max. value [Hz]:

Frequency samples [-]:

Growth rate scan domain setting:

Growth rate min. value [1/s]:

Growth rate max. value [1/s]:

Growth samples [-]:


2. Eigenvalues table

- The eigenvalues for a selected velocity ratio (or an arbitrary velocity ratio for linear FTF cases) appears in the table (as shown in the following figure).
- For nonlinear FDF situations, users can change the slider to switch the velocity ratio. The values in the table will automatically change with the velocity ratio.

Eigenvalues for selected velocity ratio


	Eigen-frequency [Hz]	Growth rate [rad/s]
1	116.0691	32.4093
2	306.3285	-14.8027
3	511.4753	-43.9518
4	737.2568	-67.0316
5	927.7747	-87.1843

Selected velocity ratio: [-]




3. Plot panel


- ✓ Users can plot three kinds of figures from the choices of the pop-up menu:
 1. A contour map showing the eigenvalue locations (growth rate and frequency).
 2. The mode shape (velocity perturbation amplitude (top figure) and pressure disturbance amplitude (bottom figure) distributions along the axial position).
 3. The evolution of growth rate (top figure) and eigen-frequency (bottom figure) with increasing velocity ratio for a selected mode. This plot is not available for linear FTF

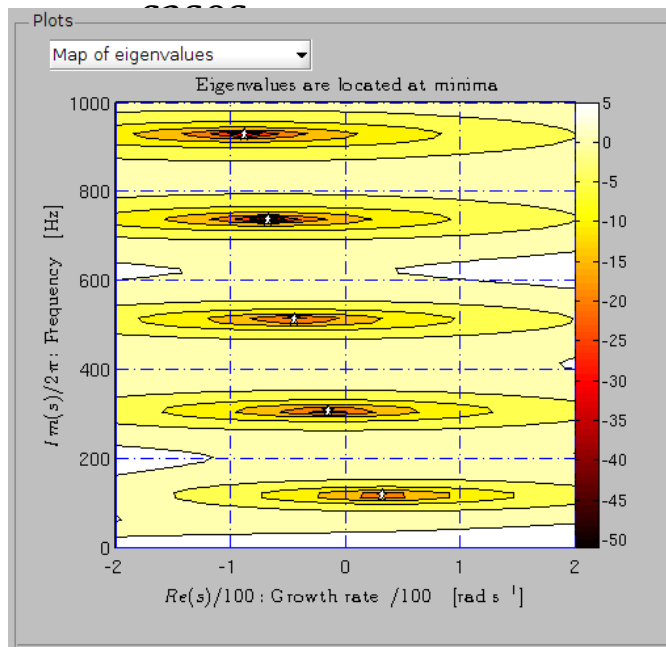

(a) contour map

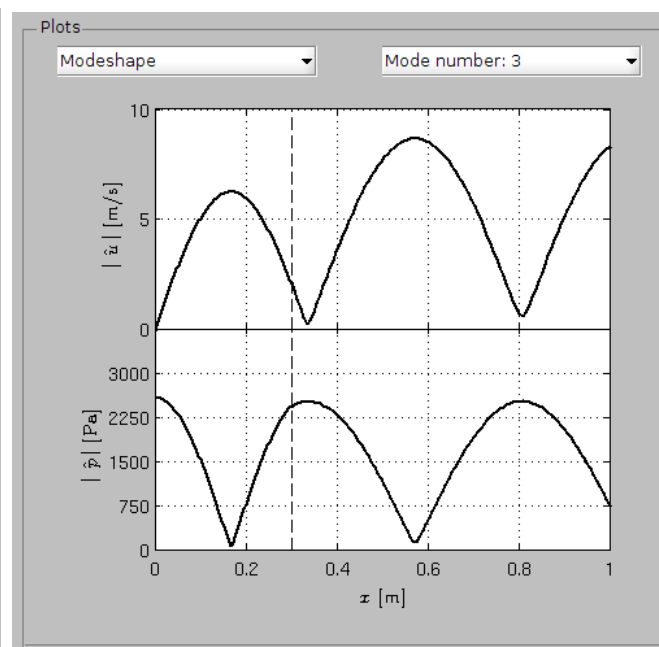


(b) mode shape

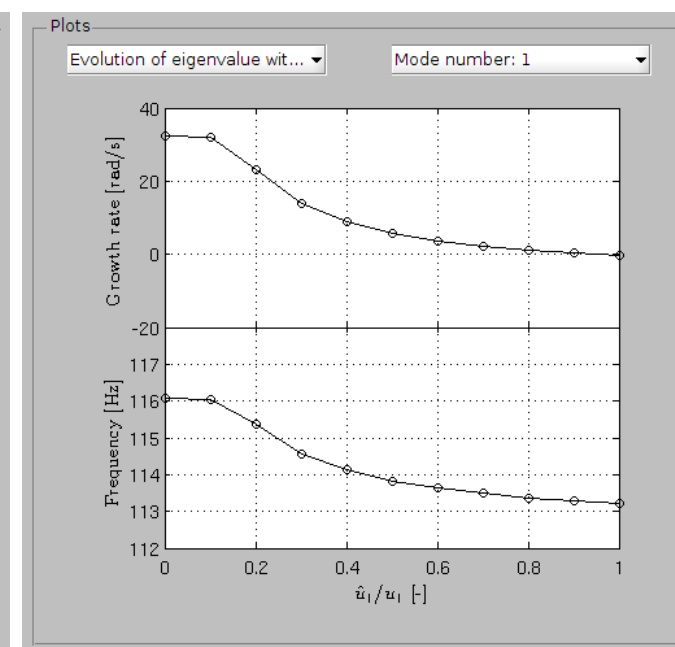

(c) evolution of eigenvalues

Time domain simulation / Examination of the Green's function

- When transfer functions have been prescribed, they are convected into Green's function for time domain simulations, by taking the inverse Laplace transform or inverse Fourier transform for causal systems.
- Herein, we only account for the inverse Laplace transform. To avoid calculation errors and reduce the computing time, the absolute value of the inverse Laplace transform of a transfer function should decrease with time and converge relatively quickly.
- This menu option is used to examine the Green's functions of the transfer functions.
- The inlet and outlet boundary conditions may be expressed in transfer function form and need to be checked.
- The flame transfer functions must be examined.
- Users can define the saturation time, to change the computing time and calculation precision.
- The evolution of the Green's function with time can be viewed from the plot.

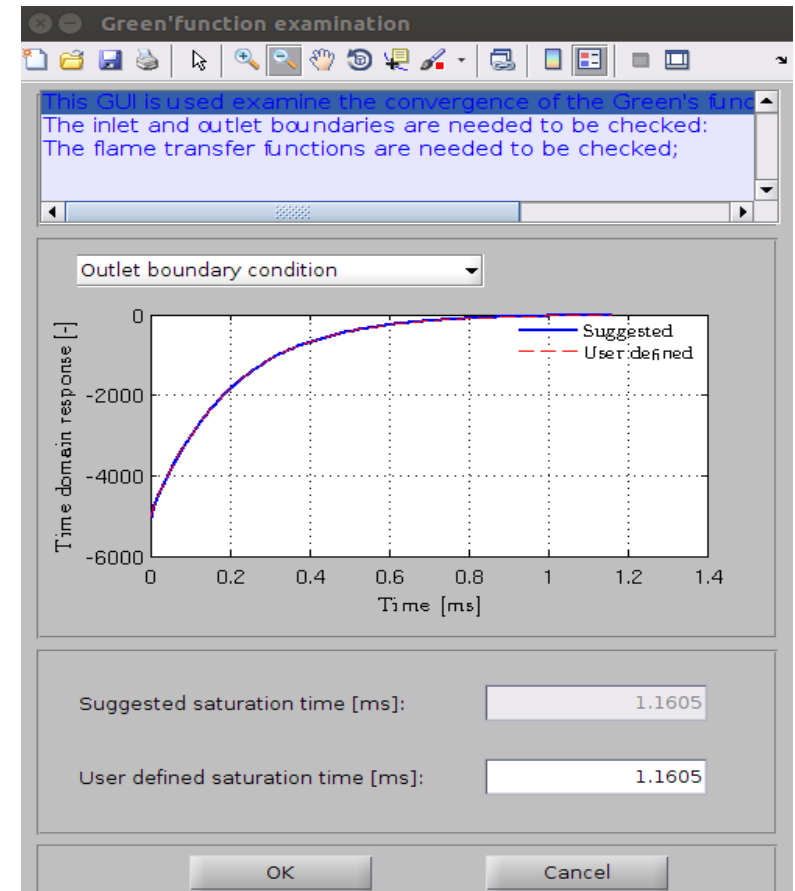

Time domain simulation / Parameters configuration

1. Simulation time and time step

This panel is used to configure the simulation stop time and time step. The minimum time delay is provided and the time step should be smaller than this value.

2. Simulation samples per loop

For linear or weakly nonlinear system, the computing speed can be accelerated by increasing the number of time steps in one calculation loop. The maximum number of steps per loop is provided and users can define the number of time steps per loop in the text box. If this box is not active, that means the computing cannot be accelerated and the default value is 1.

3. Velocity ratio upper limit

To avoid signals increasing towards infinity for unstable systems, users need to define an upper limit.

4. Background noise

The background noise information can be defined in this panel. These noises can be used to stimulate any instabilities within the combustor.


The screenshot shows a 'Parameters configurations' dialog box with the following sections and values:

- Section 1: Simulation time and step**
 - Minimum time delay: [s] (0.00086535)
 - Stop time: [s] (1)
 - Time step: [s] (0.0001)
- Section 2: Simulation samples per loop**
 - Maximum number of samples per loop: [-] (8)
 - Number of samples per loop: [-] (1)
- Section 3: Velocity ratio up-limit**
 - uRatio up limit: [-] (1)
- Section 4: Background noise**
 - Start time: [s] (-0.2999)
 - Stop time: [s] (1)
 - Noise level: [dB] (-40)


Buttons at the bottom: OK, Help, Cancel.

Time domain simulation /Simulation...

- Once all initializations are complete, the user can then progress to the “simulation...” panel.
- For linear systems or nonlinear systems with an abrupt saturation limit (Dowling's model), the calculation is simpler and a wait-bar box appears to show the computing progress.

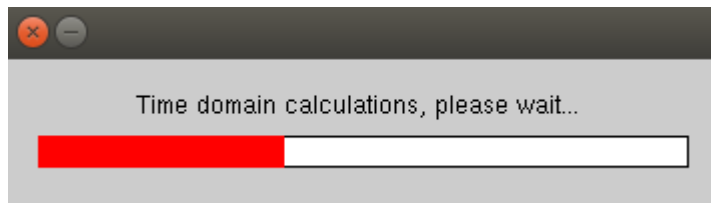


- The calculation becomes more complicated when users have chosen flame describing function models (such as our model). The transfer function changes with velocity ratio and the Green's function should be updated every time step based on the velocity ratio at the corresponding time step. However, calculating the velocity ratio needs knowledge of the Green's function.
- The calculation method can then be summarized using the flow chart on the right.

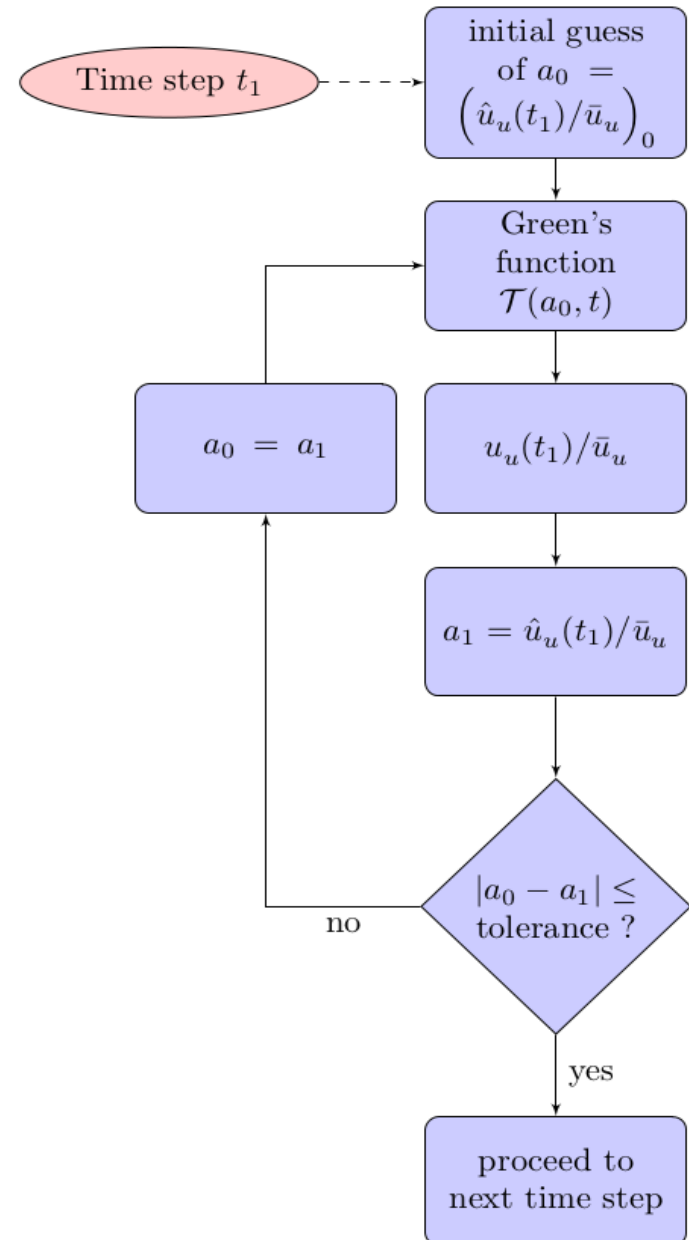


Time domain simulation /Simulation...

- When users have chosen a flame describing function model (such as our model), a calculation monitor window, as shown in the right figure, appears to show the calculation progress.
- The evolution of velocity ratio before the flame is plotted in the figure.
- The calculation error is also shown.

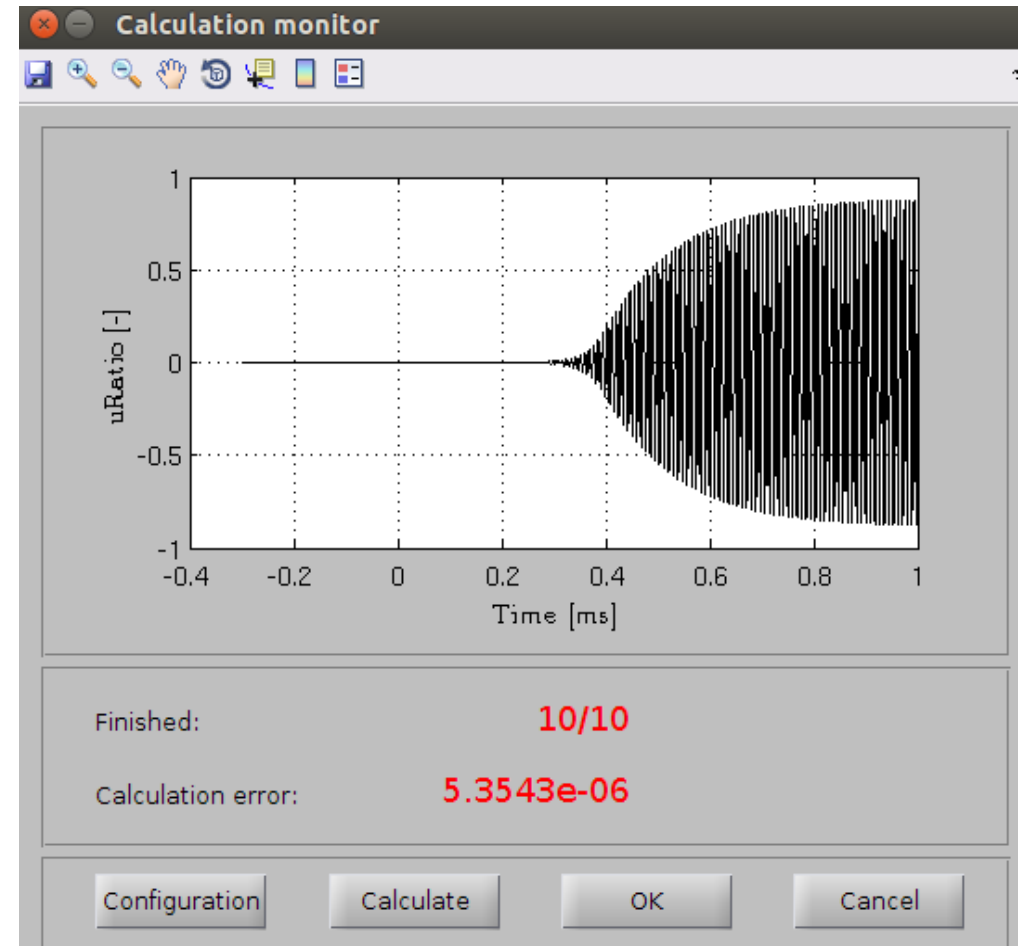

Time domain simulation /Results output and plots **Imperial College London**

- This menu option is used to plot the time domain simulation results.
- The time evolution and power spectrum of the selected signals can be plotted.

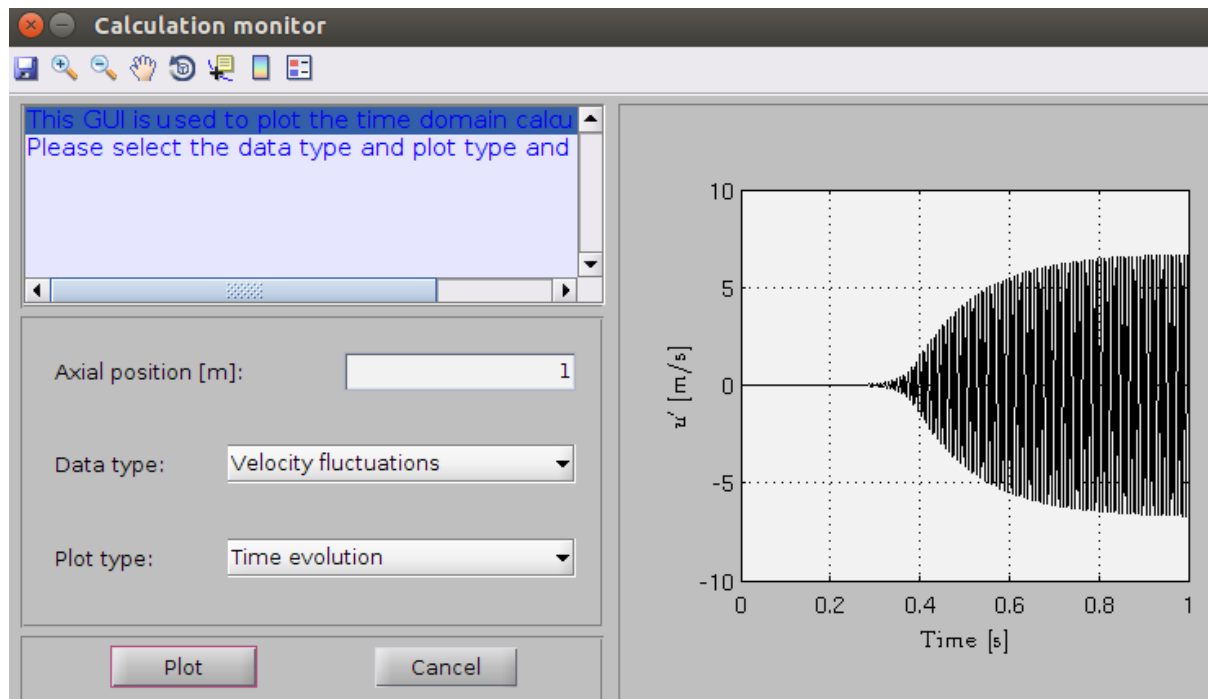

Example 1 A cold open tube


- Users can directly load the file “[Case_A_cold_open_tube.mat](#)” from the “cases” folder to see the detailed configuration and results.

1. Combustor dimensions

The combustor type is set to Rijke tube.

The dimensions are shown in the right figure.

There is no heat addition in the tube.

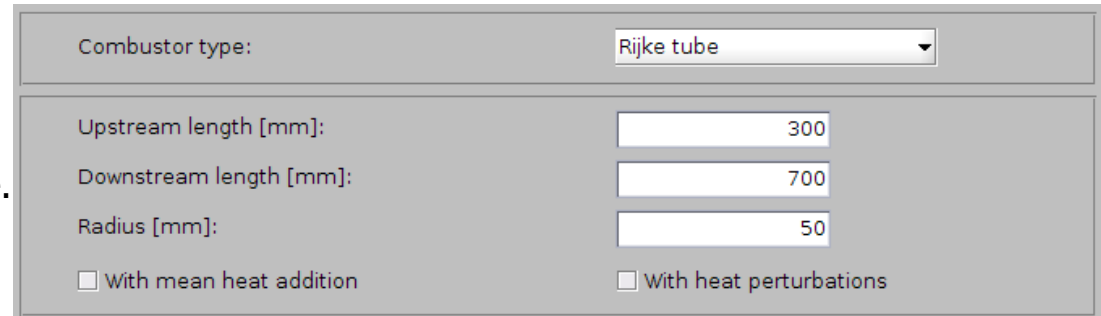

Combustor type: Rijke tube

Upstream length [mm]: 300


Downstream length [mm]: 700

Radius [mm]: 50

☐ With mean heat addition ☐ With heat perturbations

2. Mean flow and thermal properties configuration

Since there is no heat addition, the panel for heat addition configuration is not visible. The mean flow properties at the inlet are shown in the following figure.

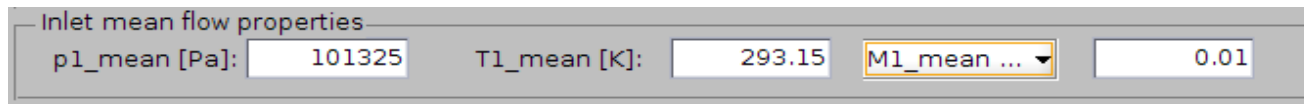


Inlet mean flow properties

p1_mean [Pa]: 101325 T1_mean [K]: 293.15 M1_mean ... 0.01

3. Boundary conditions

Since there is no heat perturbation, the user directly progresses to the boundary conditions configuration panel. The inlet and outlet are set to open and the pressure reflection coefficients are set to negative constant values, as shown in the right figures.

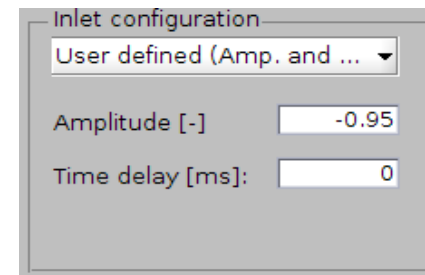


Inlet configuration

User defined (Amp. and ...)

Amplitude [-]: -0.95

Time delay [ms]: 0

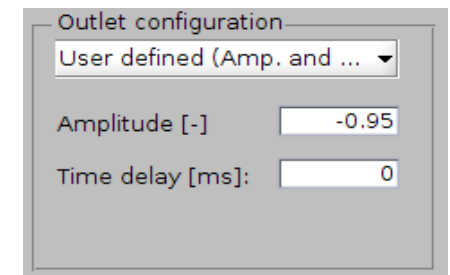

Outlet configuration


User defined (Amp. and ...)

Amplitude [-]: -0.95

Time delay [ms]: 0

Example 1 A cold open tube



- The eigenvalues and their distributions in the s-plane are calculated during the frequency domain analysis. The contour map showing these eigenvalues is shown in the bottom figure. The first five modes of the system are on the left side of the s-plane indicating that the system is stable.

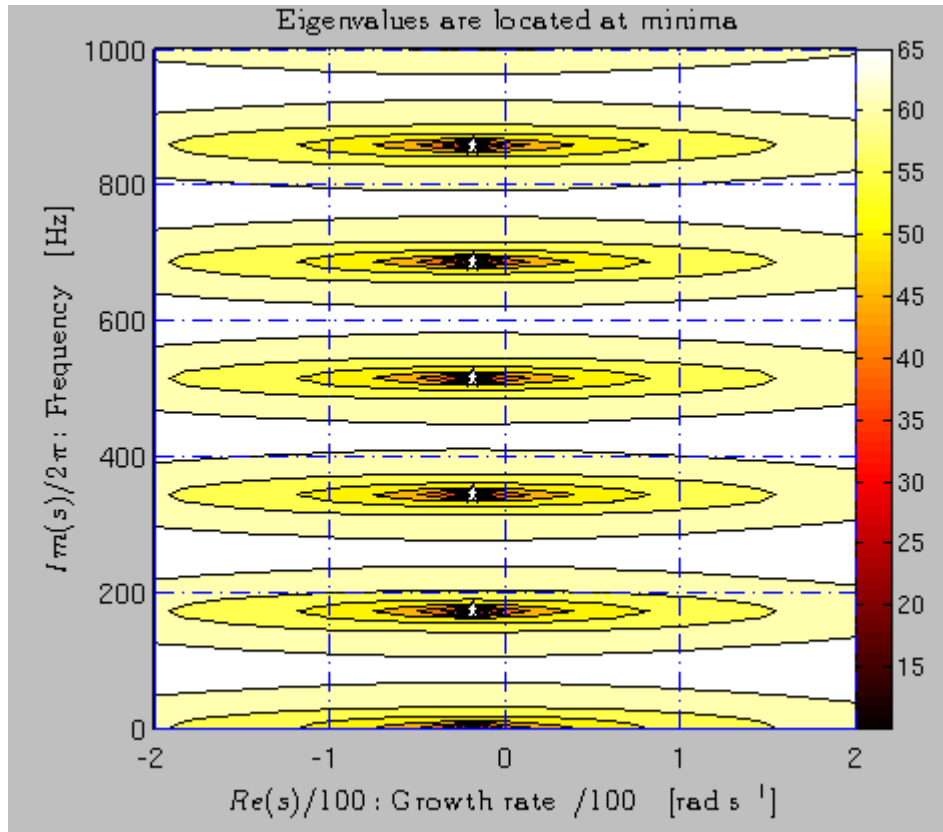


	Eigen-frequency [Hz]	Growth rate [rad/s]
1	171.6059	-17.6045
2	343.2118	-17.6045
3	514.8177	-17.6045
4	686.4237	-17.6045
5	858.0296	-17.6045

Example 1 A cold open tube

- We now progress to time domain simulations. The background noise configuration is shown in the following figure
- The white noise has a power of 10 dB and stops at $t = 0.5$ s.
- The time evolution and power spectrum of the pressure perturbations at the axial position $x = 0.6$ m are shown in the following figures. In the presence of additional white noise, all of the excited modes are stable and disturbances are attenuated. As shown in the PSD figure, the frequencies of the peaks are the same as those predicted with the frequency domain analysis.

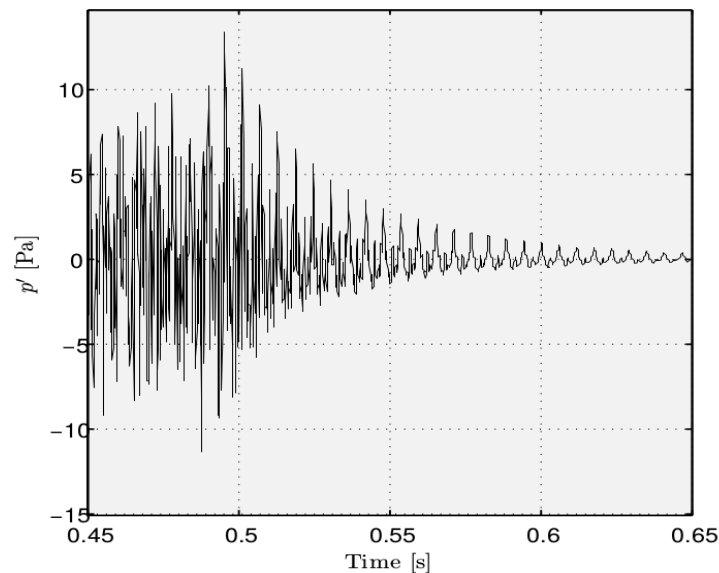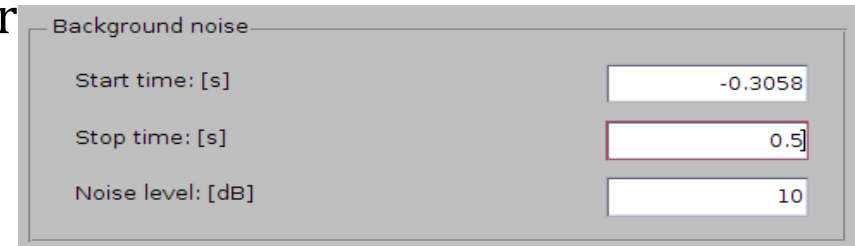

(a) time evolution

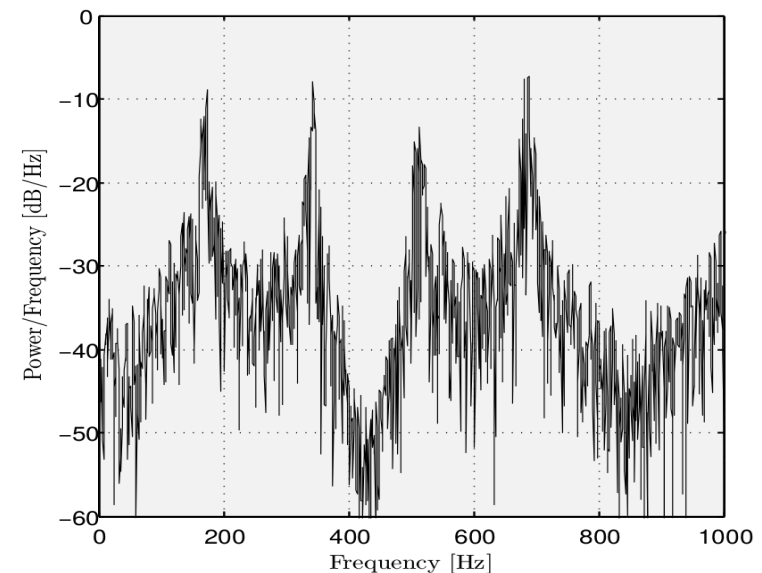

(b) PSD

Example 2 Hot combustor

- Users can directly load the file “[Case_Hot_tube.mat](#)” from the “cases” folder to see the detailed configuration and results.

1. Combustor dimensions

The combustor type is set to Rijke tube.

The dimensions are shown in the right figure.

Combustor type:	Rijke tube
Upstream length [mm]:	300
Downstream length [mm]:	700
Radius [mm]:	50
<input checked="" type="checkbox"/> With mean heat addition	<input checked="" type="checkbox"/> With heat perturbations

2. Mean flow and thermal properties configuration

The mean flow properties at the inlet are shown in the following figure.

Heat is from a heat grid and the temperature ratio is set to 2.

The mean heat release rate is calculated as 9.7201 kW.

Inlet mean flow properties			
p1_mean [Pa]:	101325	T1_mean [K]:	293.15
u1_mean [...]	3.4325		
Heat addition style			
Heat source number: 1	Heat release rate Q [kW]:	9.7201	
Heat from: Heating grid (Tb...	Temperature ratio across the flame Tb/Tu	2	
Fuel: CH4_Methane	Combustion efficiency:	1	
Equivalence ratio [-]:	Dilution ratio [-]:	0	

Example 2 Hot combustor

3. Flame model

Our nonlinear flame describing function is chosen as the flame model.

The parameters configuration for the flame transfer function and the nonlinear saturation model are shown in the right figure.

4. Boundary conditions

The inlet is set to closed and the outlet is set to open. The reflection coefficient is expressed as a transfer function as shown in the bottom figure.

Inlet configuration

Closed end

Outlet configuration

Transfer function model

Numerator(s): [-5000]

Denominator(s): [1 5000]

Time delay [ms]: 0

Linear flame transfer function model

1st-order low pass filter

af [-] 1

fc [Hz] 75

tauf [ms] 3

Nonlinear model

J.Li and A.S.Morgans JSV




alpha [-] 0.85

beta [-] 50

taufN [ms] 0


Example 2 Hot combustor

- The right figure shows the evolution of growth rate and resonant frequency of the first mode with velocity ratio before the flame. With increasing normalized velocity perturbations, the growth rate decreases and a limit cycle is finally established when the velocity ratio equals to 0.3.
- This has been validated in the time domain simulation results. The figures at the bottom show the evolution of velocity ratio with time.

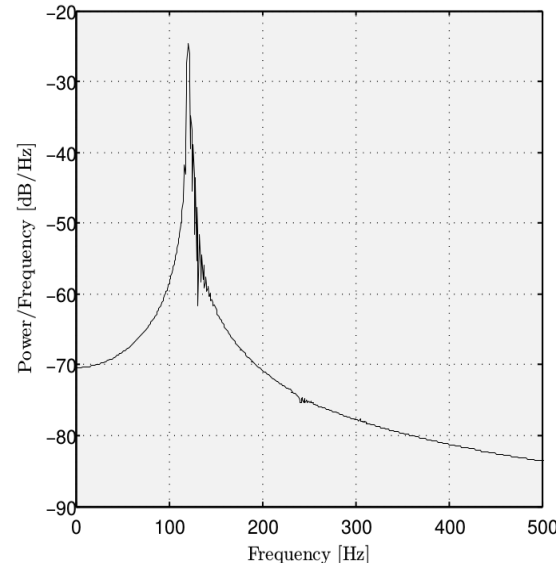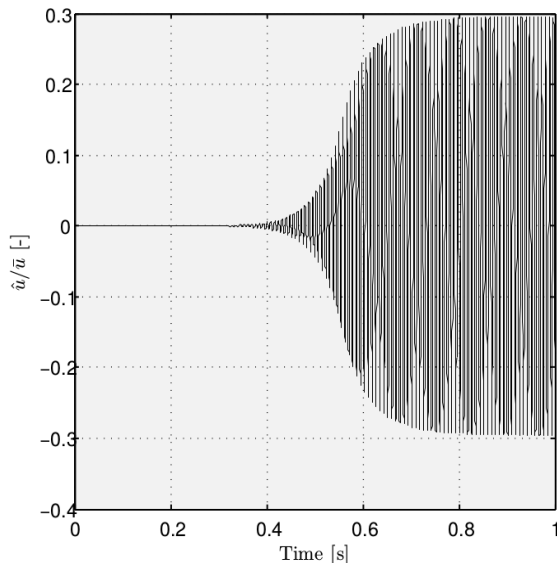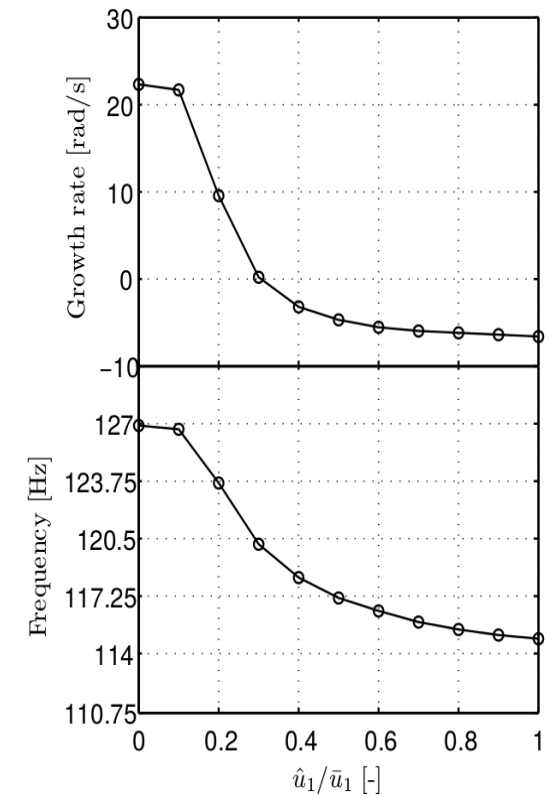



Example 3: A laboratory combustor rig

- The experiments were carried out by Palies and co-workers in Laboratory EM2C. The combustor includes a plenum, an injection unit and a combustion chamber terminated by an open end. The compact flame is stabilized at the beginning of the combustion chamber.
- OSCILS can account for this complicated combustor shape and the combustor shape can be viewed from the following figure.
- Experiments were carried out with the plenum and chamber comprising varying lengths to change the eigenvalues of the combustor. Herein, we only take one unstable case for the comparison between the calculation results from OSCILS and the

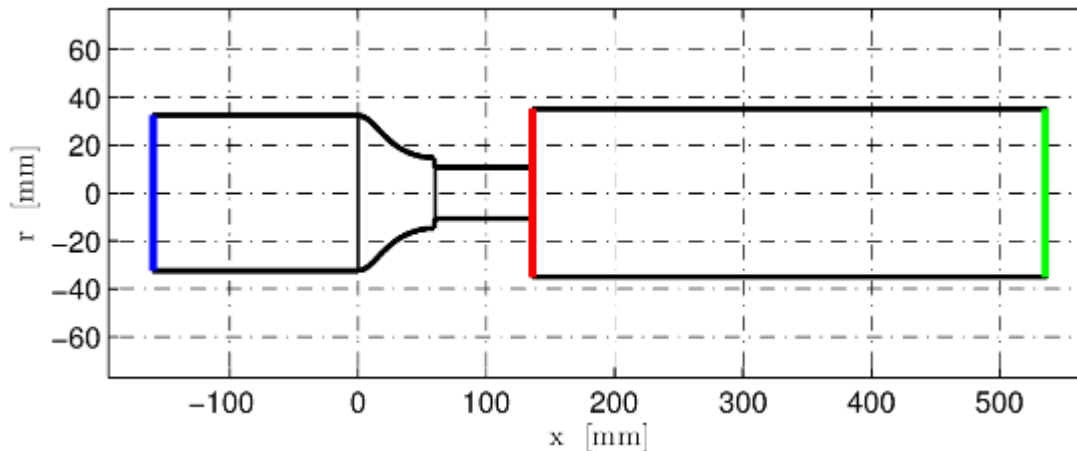

Example 3: A laboratory combustor rig

- Mean flow and thermal properties: methane is used as the fuel and the equivalence ratio is 0.7. The measured mean temperature of the burned gases is 1600 K. So that the calculated mean temperature matches the experimental result, the combustion efficiency is set equal to 0.825.

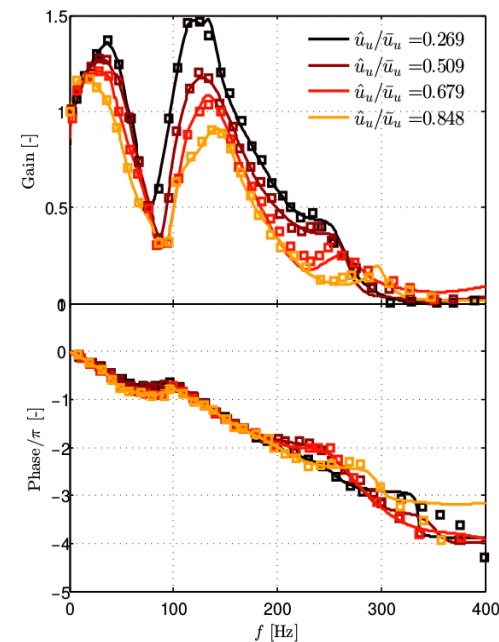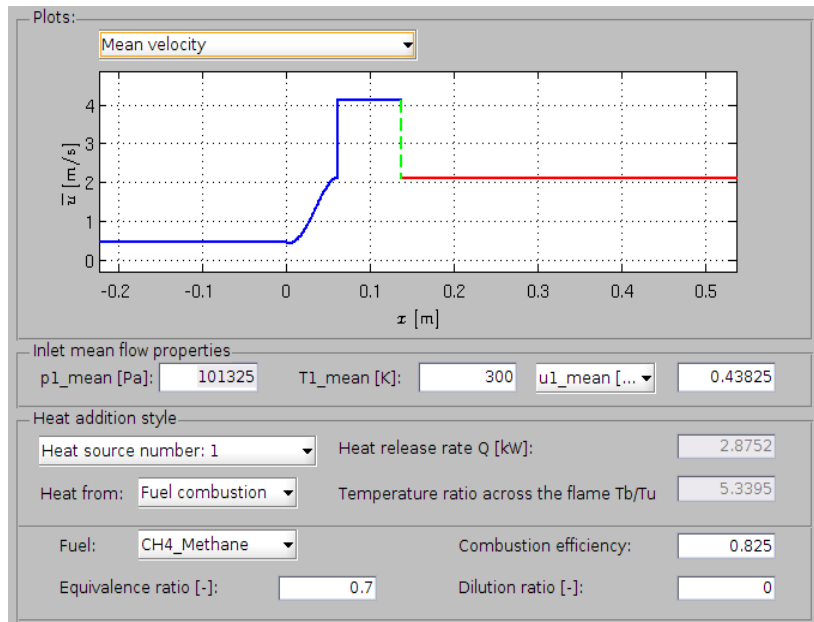


- Flame model: the experimental flame describing functions (markers) and their fitted results (solid lines) are shown in the right figure.
- Boundary conditions: the inlet boundary condition is set to closed with a reflection coefficient of 0.97, and the outlet is set to open.


Example 3: a laboratory combustor rig

- The distribution of eigenvalues are shown in the following contour maps for two velocity ratios. The main unstable modes are highlighted by the blue circles.
- With the increase of flow velocity, the growth rate of the unstable mode decreases to zero and a limit cycle is established. The predicted resonant frequency and velocity ratio before the flame when the limit cycle is established are 126.1 Hz and 0.714, respectively. In the experiment, the resonant frequency and velocity ratio before the flame when the limit cycle is established are 126 Hz and 0.68, respectively.

➤ the

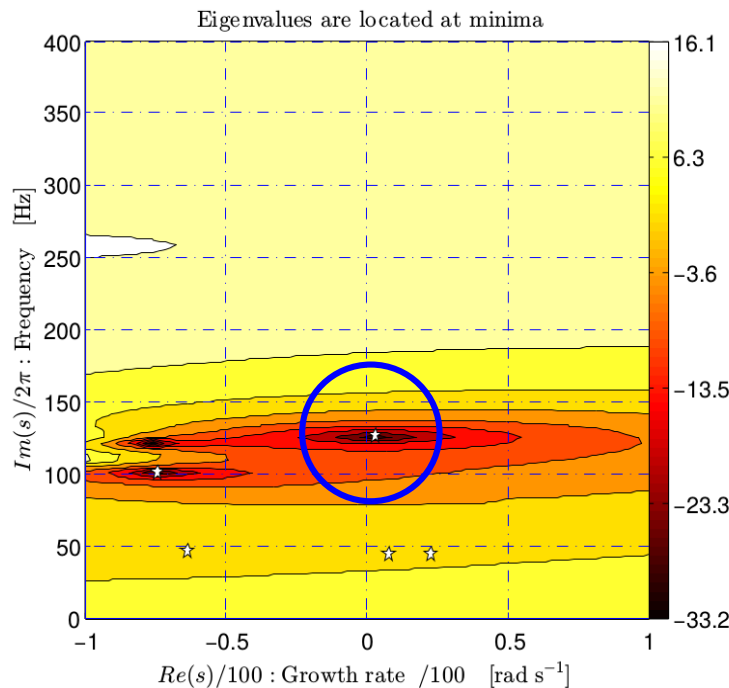

(a) $\hat{u}_u/\bar{u}_u = 0.68$

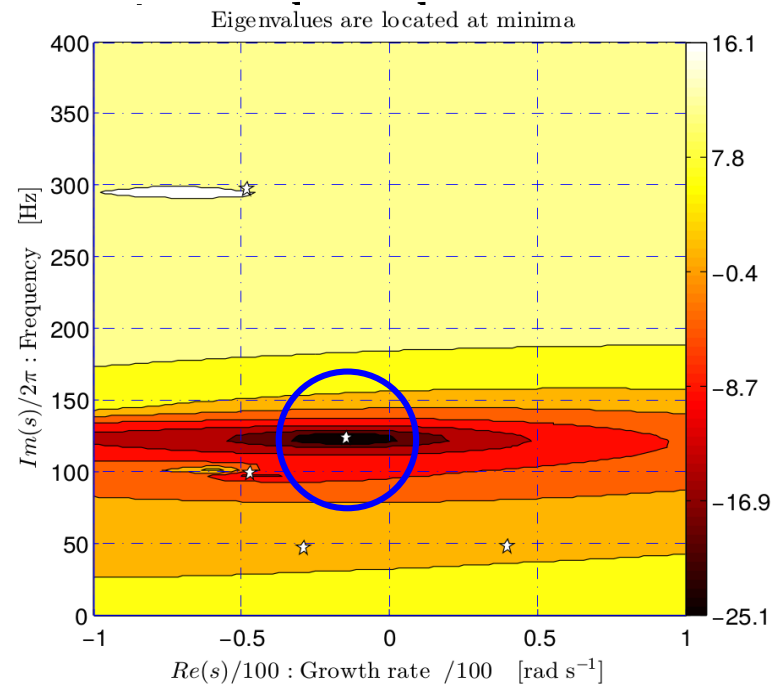

(b) $\hat{u}_u/\bar{u}_u = 0.85$